



**10321**

# Electric Pizza Oven

**KuK** 

Try **Monster** - Buy **Monster** - Be **Monster**

# Specification

## Product Description

The electric pizza oven heats to between 50°C and 350°C, and has twin decks and three separately controlled heating elements, so you can turn it to all kinds of exotic food such as garlic bread, ciabatta, naan, lasagne, pastries and even - most exotic of them all - pies.

Because it's freestanding, the electric pizza oven can be up and running immediately and moved around your counter or kitchen. Reinforced steel doors give you access to each deck separately, as well as keeping the heat in. It looks good too, with a bright red stainless steel exterior which is easy to clean, and windows so you can check up on your food without having to open the doors and lose a moment's cooking time. Speaking of which, you can set the timer for up to 30 minutes with an alarm to alert you when the food is ready.

## Technical Information

Capacity:	Grill or Bake up to 16 Inches Diameter
Voltage:	220-240 Volts
Power:	3 kW
Temperature Range:	0°C- 350°C

## Product Specifics

Number of Oven Compartments:	2
Number of Elements:	3
Timer Range:	Up to 30 Minutes
Dimensions:	56cm x 57cm x 40cm
Pizza Stone Dimensions:	39.5cm x 39.5cm x .9cm

## Monster Guarantee

If you wish to return a product in perfect working order, we provide a 30 day returns policy as long as the item is unopened and in a resalable condition.

A 12 month warranty applies to all of our electrical products; we will cover the cost of labour and parts. Our policy is to try and repair the item before arranging an exchange or refund.

If for any reason a part is missing please get in touch with us within 7 days on receipt of your order. You can contact our friendly and helpful Customer Support Team via email or call. For full terms and conditions contact our Support Department via the details on the Contact Us page.

# Specification

## Product Features

- |                                |     |
|--------------------------------|-----|
| 1) Pizza Oven Door             | x 2 |
| 2) Pizza Oven Viewing Window   | x 2 |
| 3) Door Handle                 | x 2 |
| 4) Temperature Indicator Light | x 3 |
| 5) Temperature Dial            | x 3 |
| 6) Timer                       | x 1 |
| 7) Light Switch                | x 1 |
| 8) ON/OFF Power Switch         | x 1 |



# User Guide

## Operation Instructions

- 1) Ensure all packaging has been removed from the oven.
- 2) First, the handles will need attaching to the oven doors. This is simply done with 2 x bolts per handle. Screw in to attach.
- 3) Once assembled, plug the oven into a suitable power source. Ensure that the surrounding area:
  - is a safe distance from a water source.
  - dry.
  - has suitable ventilation.
- 4) Switch the power source on.
- 5) Turn main switch on the oven ON. When ON, the switch will light up.
- 6) The oven is heated using 3 elements. Each element has a temperature dial. If you want to use BOTH compartments, all 3 dials need to be turned to temperature. If you wish to use just the TOP oven, the upper and middle temperature dials need setting to temperature. To just use the BOTTOM oven, the middle and lower temperature dial need setting.
- 7) To heat, using the temperature dial, turn to the desired temperature to pre-heat the oven- the indicator light will illuminate. Once reaching temperature, the indicator light will turn off. The oven is ready to use.  
Note: If you wish to cook pizzas, make sure the fire stones are placed on the shelves during the pre-heating stage.
- 8) Set the timer to desired cooking time and place in your food to be cooked. Once reaching 0 the oven will sound an alarm to let you know your food is ready. During the cooking process, if you wish to look at your food, simply turn on the light switch and view through the window. You can turn this on and off at your own convenience.
- 9) Once finished, remove food and turn off.

**Please Note - The timer must be set in order for the oven to operate.**

# User Guide

## Changing the Oven Light Bulb

If the oven light bulb has blown, it will need to be changed. Please follow these simple steps on how to do this.

Step One:

Please make sure the oven is cold. Do not attempt to change the light bulb while the oven is still hot.

Step Two:

Remove the fire stone.

Step Three:

Unscrew the glass cover.

Step Four:

Unscrew the light bulb and replace. Make sure you use an appropriate Oven Bulb – Small Edison Screw light bulb. This part can be a little fiddly.

Step Five:

Once changed, replace the glass cover and screw back in place.

Step 6:

Test by switching on.

Step 7:

Replace fire stone, and you are ready to go!

# Troubleshooting

## Resolution Guide

Please read through the guide below if you have any issues or faults with your device. The information covers and resolves the majority of frequently asked questions.

**Q: My pizza oven will not heat up.**

A: First, please check all switches are ON and the temperature dials are set at the correct temperature. If the oven is still not heating up, there may be a fault with the wiring. Please call our Customer Support Team and we will arrange a time to collect your oven to be fixed by our technician.

**Q: My pizza is only cooking on top or is uneven.**

A: You must ensure you are using 2 elements to cook the pizza- one for the topping and another for the base to make sure it cooks evenly. If you wish to use just the TOP oven, the upper and middle temperature dials need setting to temperature. To just use the BOTTOM oven, the middle and lower temperature dial need setting.

**Q: When I turn the light switch on, it does not light up.**

A: It is possible the bulb has blown. Replace as described in User Guide.

**Q: My pizza takes a long time to cook when I place it in the oven.**

A: You must ensure you are pre-heating the oven first. When the oven has reached the set temperature, the indicator lights will turn off. At this point, you can then put your food in the oven to cook.

**Q: Do I put the fire stones in with the pizzas or before?**

A: Put the fire stones in the oven first and leave in during the pre-heating stage. They need to get to temperature with the oven. Please be careful when adding the pizza, as the stones will be very hot.

**Q: There is a part missing from my order.**

A: Call our Customer Support Team (details on the Contact Us page) within 7 days of receipt and we will sort it all out for you.

# Safety Advice

## Safe Working Practice

Please read through the safe working practice to ensure prevention of injury or damage to the device.

Do not operate the device in wet areas as the machine will not function correctly.

Do not use the machine if the adaptor wire is frayed or damaged.

When the device is not in use ensure that the power plug is removed from the socket. This will prevent damage to the appliance through power surges.

This appliance can be dangerous if the power cord or wires come into contact with water. Attaching a RCD adaptor will instantly cut off the electricity supply to the machine to prevent potentially fatal shocks.

Clean this product after every use and unplug the appliance from the wall whilst cleaning.

Only operate if a competent adults.

Use oven gloves when adding/removing food. The oven will get very hot.

Cook appropriate foods in the oven.

Ensure the plug is compatible with the main power supply.

Do not try to exceed 350°C.



# Contact Us

## Sales Department

For information regarding this device or other products from our Monster divisions please use the following details below.

Tel: 01347 878888

Email: [hello@monstershop.co.uk](mailto:hello@monstershop.co.uk)

## Support Department

For queries about this device, warranty, returns or reporting faults please use the following details below.

Tel: 01347 878887

Email: [help@monstershop.co.uk](mailto:help@monstershop.co.uk)

## Website

To view our product range and fantastic offers in the Monster divisions please visit our website

[www.monstershop.co.uk](http://www.monstershop.co.uk)

## Address

To visit our office Monster House and view our products, send postal correspondence or return items our address is provided below.

Monster House, Alan Farnaby Way, Sheriff Hutton  
Industrial Estate, Sheriff Hutton, York YO60 6PG





---

Monster Group (UK) is one of the UK's fastest growing online retailers. We supply a diverse range of products which offer exceptional value for money. We strive to provide the best possible customer experience with free UK delivery across all our products and a Monster Guarantee for 100% satisfaction.

Our dedicated customer service team will be more than happy to help with any questions you may have.

Home & Garden  
Storage Shelving  
Sign & Digital  
Retail & Hospitality  
Commercial Equipment

**Check out all our Monster brands at [www.monstershop.co.uk](http://www.monstershop.co.uk)**

---