



10667

# Juke Box



Try **Monster** - Buy **Monster** - Be **Monster**

# Specification

## Product Description

We all need our favourite tunes to get a party started, well why not play them in retro style with this amazing Juke Box? It may look like a 1950's classic, but it has been adapted with 21st century technology.

You can play music from you CD's, USB, Memory Cards, through the AUX, the radio and even via Bluetooth! This is a true crowd pleaser and unbelievably versatile.

The music controls and functions mean you can playback songs at your chosen levels, perfect to suit a subdued event or absolute rave! You can even add to the atmosphere with static or changing lights. Time to get rock n' rolling!

## Technical Information

Power Output: 40 Watts

Power Consumption: 60 Watts

Voltage: 220-240V 50Hz

Lighting: 7 LED Colour Changing Bulbs

## Product Specifics

Dimensions: 105cm H x 57cm W x 30cm D

Weight: 22Kg

 
 
 
## Monster Guarantee

If you wish to return a product in perfect working order, we provide a 14 day returns policy as long as the item is unopened and in a resalable condition. A 12 month warranty applies to all of our electrical products; we will cover labour, parts and delivery charges. Our policy is to try and fix the item before arranging an exchange or refund. If for any reason a part is missing please get in touch with us within 7 days on receipt of your order. For full terms and conditions contact our Support Department via the details on the Contact Us page.

# Specification

## Product Features

- 1) Music Adjustment Dials
- 2) Power Switch
- 3) Remote Control Sensor
- 4) Play Buttons
- 5) Reset Pointer
- 6) Disc Tray
- 7) USB / SD Card
- 8) Door Latch
- 9) Bluetooth
- 10) Display Screen
- 11) Light Button
- 12) Music LED

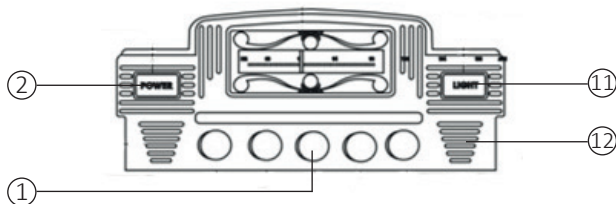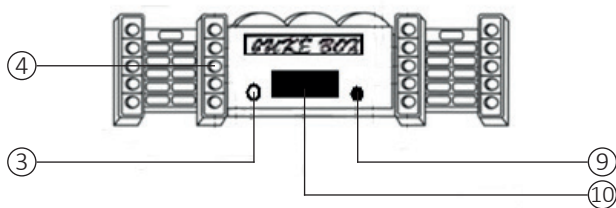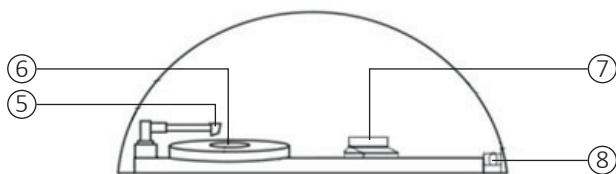

# User Guide

## Function Guide



### Remote Control Functions

**Mode:** Changes the mode of playback- CD, USB or memory card.

**Play/Pause:** Play or pause a track.

**Stop:** Stop a track.

**F.F (Fast Forward):** Fast forward through a track. You can then press the play button to start playback.

**Next:** Go to the next track.

**F+10:** Go forward by 10 tracks.

**F.B (Fast Back):** Rewind back through a track. You can then press the play button to start playback.

**Back:** Go back by one track.

**F-10:** Go back to 10 tracks previous.

**PRG (Program):** Allows you to program only particular songs of your choice to playback from your music source.

**RAD (Random):** Shuffles music and plays back in a random order.

**REP (Repeat):** Replays one particular song. The word REP will be displayed on the LCD display screen on the juke box. Pressing the repeat button again will play the whole contents of the disc, USB stick, memory card or Aux in source. Press the repeat button again to exit the repeat mode (REP will not be displayed on the LCD screen).

 
# User Guide

## Function Guide

CD-MP3/USB/SD Mode  
Colour Flash  
Play/Pause  
Program  
Stop



Next  
Back  
F+10  
F-10  
Repeat

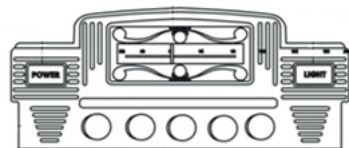

Volume Treble Tuning Bass Mode Selector

Functions on the Juke Box

**CD-MP3/USB/SD MODE:** Change playback mode between CD, USB or memory card.

**Colour Flash:** After turning on the main light, press the colour flash button to stay one colour, press again to resume the colour changing.

**Play/Pause:** Play or pause a track.

**Stop:** Press to stop a track. Press the play button to re-start music playback.

**Program:** Allows you to program only particular songs of your choice to playback from your music source.

**Next:** press to play the next track.

**Back:** Play the previous track.

**F+10:** Go forward by 10 tracks.

**F-10:** Go back to 10 tracks previous.

**Repeat:** Replays one particular song. The word REP will be displayed on the LCD display screen on the juke box. Pressing the repeat button again will play the whole contents of the disc, USB stick, memory card or Aux in source. Press the repeat button again to exit the repeat mode (REP will not be displayed on the LCD screen).

**Volume Control:** Turn to increase or decrease volume.

**Treble:** Turn to increase or decrease treble.

**Tuning:** Use when in AM or FM radio mode. Turn the dial to the left or right to tune to different radio stations. See the tuning dial above the controls to see the band. FM on top, AM below.

**Bass:** Turn to increase or decrease bass.

**Mode Selector:** 4 different functions.

# User Guide

## Operation Instructions

### Music Playback

Press the door latch to open the top compartment. Once open you can load a CD, USB device or memory card. To close the window, gently push it back in place.

### CD Playback

- 1) Place a CD on to the disc tray.
- 2) Take care not to touch the CD laser and ensure that the CD label is facing upwards.
- 3) Gently move the switch arm so that it is on top of the CD. The CD will then start spinning and play.
- 4) If the message 'OP' appears on the juke boxes LCD display screen in the mode for CD playback, the tone arm has not been moved across so it is on top of the CD. The correct position is for the tone arm to be angled to the right and be on top of the CD.
- 5) Using the mode selector dial, ensure it is turned to CD/USB/SD card, or press the CD-MP3, USB SD mode button on the remote control.
- 6) Press play!

### USB/Memory Card

- 1) Ensure the juke box is turned off before inserting the USB device or memory card. Ensure the music files are saved in FAT32 format.
- 2) Using the mode selector dial, ensure it is turned to CD/USB/SD card, or press the CD-MP3, USB SD mode button on the remote control.
- 3) Press play!

### AUX Cable

- 1) Ensure the AUX IN switch at the back of the juke box is in the ON position.
- 2) Ensure the function dial is turned to AUX in position.
- 3) Plug the AUX in lead at the back of the juke box into your iPhone/iPod or other MP3 device. The AUX lead needs to be plugged into the earphone socket of your iPhone/iPod or other MP3 device.
- 4) Ensure line out switch at the back of the juke box is in the off position when using AUX in.
- 5) Ensure the speaker switch is switched to on if none are connected.
- 6) Press play! If you cannot hear anything, turn up the volume on the juke box or remote control.

# User Guide

## Operation Instructions

### Program Mode

This can be done using the remote control or pressing buttons on the juke box.

- 1) While playing back from a music source, press the stop button.
- 2) Press the program button to enter the program mode. The word PROG will flash in the bottom left corner of the display screen. A position number will also be flashing on the screen.
- 3) Press the next or back buttons to select which track you want to program into position. When you have made your selection, press the program button to save it.
- 4) You can then repeat the same steps to fill in more positions.
- 5) When done, press play to begin your music playback. You can do this at any stage once you have programmed the amount of tracks you want.
- 6) At any stage during the program process you can press stop to cancel.
- 7) FUL will display on the LCD screen when the max amount of positions have been filled.

### Bluetooth

- 1) Put the mode selector switch to "BT-AUX" position.
  - 2) Adjust your settings on the Bluetooth device and ensure that Bluetooth connection is turned on.
  - 3) The LED light will be flashing on the Bluetooth indicator on the juke box. Pair your device with the jukebox. The device will be displayed as "JUKEBOX", the password is "0000"
  - 4) When the red LED light begins to flash slowly, device and Bluetooth pairing has been successful and you can now begin your music playback.
- Note:** Ensure the "AUX" in switch on the back of the juke box is in the off position.
- 5) The Bluetooth control panel is on the side of the juke box.

### Line Out Switch

You have the option to use the line out ports to connect an external amplifier device, and the option to connect your own external speakers. If you do not connect anything to line out ensure the LINE OUT SWITCH is in the OFF position to playback through the juke box. If you do not connect any external speakers, ensure the SPEAKER SWITCH is in the ON position to playback through the juke box.

# Troubleshooting

## Resolution Guide

Please read through the guide below if you have any issues or faults with your device.

**Q: I cannot get any radio reception.**

**A:** Ensure the mode selector has been set to the correct position. Switch the AUX IN jack to 'Off'. Adjust the volume, rotate the tuning dial to find a radio station.

**Q: I cannot get my CD to play back and the sound skips.**

**A:** Check the power cord plug is connected firmly, and press the power button. Make sure the disc is clean and facing the correct way up (label up). Ensure the mode selector has been set to the correct position. Switch the AUX IN jack to 'Off'. Adjust the volume.

If it still will not play, simply call or email our Support Team. They will guide you through issues or arrange a date and time for us to collect the product and fix it with our one year guarantee.

**Q: There are parts missing from my order.**

**A:** If there appears to be any part missing from your package contact our Customer Support team via the details on the Contact Us page.

**Q: I cannot get the music to play from my memory stick/SD card.**


**A:** Ensure it is inserted properly into the machine. Change the mode to CD/USB/SD. Make sure the music file format is in FAT32.



# Safety Advice

## Safe Working Practice

Please read through the safe working practice to ensure prevention of injury or damage to the device.

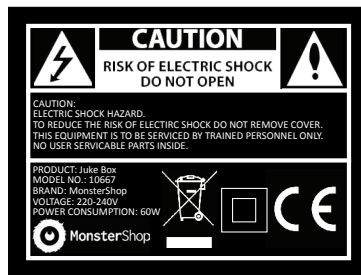

Do not operate the device in areas of high temperature or humidity as the machine may not function correctly.

Do not remove the back panel due to risk of electric shock.

Indoor use only.

Do not use the machine if the adaptor wire is frayed or damaged.

When the device is not in use ensure that the power plug is removed from the socket. This will prevent damage to the appliance through power surges.

This appliance can be dangerous if the power cord or wires come into contact with water it can potentially cause fatal shocks.

Only use appropriate music sources.

Keep in a well ventilated area.

Only allow a technician to repair.



# Contact Us

## Sales Department

For information regarding this device or other products from our Monster divisions please use the following details below.

Tel: 01347 878888

Email: [hello@monstershop.co.uk](mailto:hello@monstershop.co.uk)

## Support Department

If this item arrives damaged, with missing pieces or you have not opened the racking and want to return it please use the following details below.

Tel: 01347 878887

Email: [help@monstershop.co.uk](mailto:help@monstershop.co.uk)

## Website

To view our product range and fantastic offers in the Monster Racking division please visit our website.

[www.monstershop.co.uk](http://www.monstershop.co.uk)

## Address

To visit our office Monster House and view our products, send postal correspondence or return items our address is provided below.

Monster House, Alan Farnaby Way, Sheriff Hutton  
Industrial Estate, Sheriff Hutton, York YO60 6PG



---

Monster Group (UK) is one of the UK's fastest growing online retailers. We supply a diverse range of products which offer exceptional value for money. We strive to provide the best possible customer experience with free UK delivery across all our products and a Monster Guarantee for 100% satisfaction.

Our dedicated customer service team will be more than happy to help with any questions you may have.

Home & Garden  
Storage Shelving  
Sign & Digital  
Retail & Hospitality  
Commercial Equipment

**Check out all our Monster brands at [www.monstershop.co.uk](http://www.monstershop.co.uk)**

---