

173F

6HP

HOT. EXHAUST

STOP RUN

FUEL COCK

CLOSE OPEN

DECOMPRESS

OPERATION

- CHECK FUEL AND ENGINE OIL LEVEL BEFORE STARTING.
- OPEN THE FUEL COCK AND MOVE THE ENGINE SPEED LEVER TO THE 'RUN' POSITION.

STARTING.
(RECOIL).

- 1) PULL THE STARTER ROPE SLOWLY UNTIL YOU FEEL RESISTANCE RETURN ROPE.
- 2) PUSH THE DECOMPRESSION LEVER DOWN AND RELEASE.
- 3) PULL THE STARTER ROPE HARD AND FAST, ALL THE WAY-OUT (ELECTRIC).

TURN THE KEY TO FULL 'START' POSITION AND RELEASE WARM UP ENGINE FOR ABOUT 15 MINUTES.

- TO STOP ENGINE.
- RETURN ENGINE SPEED LEVER TO 'STOP' POSITION. (ELECTRIC) TURN KEY TO 'OFF' POSITION. CLOSE FUEL COCK.

NOTICE

PLEASE CONNECT THE BATTERY WIRE BEFORE USING

LOW OIL WARNING!

DO NOT RUN ENGINE WITHOUT CHECKING OIL LEVEL IN CASE OF AUTO STOP OR LIGHTING OF OIL PRESSURE ALERT LAMP

CHECK ENGINE OIL BEFORE EACH START. BE SURE TO USE OIL SAE 10W30 GRADE CC

DIESEL FUEL ONLY

DO NOT USE PETROL

T-MECH

210410
Diesel Generator

Frequency	50Hz
Max output	2.0kVA
Rated voltage	230V
Phase Number	Single
Fuel tank capacity	12.5L
Enigne model	173F
Enigne Output	6HP
Starting system	Manual

50 HZ

50

CAUTION

DIESEL FUEL FLAMMABLE

- ▲ BE SURE TO STOP THE ENGINE WHEN ADDING FUEL
- ▲ DO NOT OPERATE THE ENGINE INDOORS OR IN POORLY VENTILATED PLACES

CHECK THE ENGINE OIL (SAE 10W30 GRADE CC). CHANGE OIL EVERY 100HRS

HIGH LIMITED

LOW LIMITED

DO NOT OPERATE THE ENGINE IN WATER OR RAIN

READ OPERATION MANUAL FOR COMPLETE INSTRUCTIONS

50 HZ