



23294

# 60-in-1 Retro Arcade Games Machine



Try **Monster** - Buy **Monster** - Be **Monster**

# Specification

## Product Description

There's nothing like a classic 80's arcade game bringing back good memories.

The 60-in-1 Retro Arcade Games Machine is the perfect addition to any bar, game room or arcade. Up to two players can enjoy the 60 classic arcade video games, such as Pac-Man, Donkey Kong, Galaga and Space Invaders, on a high quality, robust tempered glass topped cabinet.

This games console has a high resolution display with eye catching details and an interactive stereo sound system.

The machine has been designed for both private and public use, working in freeplay mode and as a coin operated arcade games machine. The coin mechanism can be activated and set for use with most coins.

**We understand this is an exciting new purchase but please familiarise yourself with the instruction manual before using the arcade games machine.**

## Monster Guarantee

If you wish to return a product in perfect working order, we provide a 30 day returns policy as long as the item is unopened and in a resalable condition.

A 12 month warranty applies to all of our electrical products, we will cover labour, parts and delivery charges. Our policy is to try and fix the item before arranging an exchange or refund. For full terms and conditions contact our Support department via the details on the Contact page.

# Specification

## Technical Information

19" Colour LCD Screen

Voltage: 230V

Power: 100W

UK 13A 3 Pin Plug

## Product Specifics

Size: 64.5cm x 93cm x 73cm (WxDxH)

Weight: 50kg

Material: Melamine coated MDF with 6mm toughened tempered glass top to EU and British Satety Standards.

## Full Games List

### Pac-Man Series

- Pac-Man
- Pac-Man (Fast Mode)
- Pac-Man Plus
- Pac-Man Plus (Fast Mode)
- Jr. Pac-Man
- Jr. Pac-Man (Fast Mode)
- Ms Pac-Man
- Ms. Pac-Man (Fast Mode)
- Super Pac-Man

### Donkey Kong Series

- Donkey Kong
- Donkey Kong Junior
- Donkey Kong 3

### Galaga Series

- Galaga
- Galaga (Fast Fire Mode)
- Galaga 3

- 1942
- 1943
- 1943 Kai
- Amidar
- Arkanoid
- Bomb Jack
- Burger Time
- Congo Bongo
- Crush
- Dig Dug
- Dig Dug 2
- Frogger
- Galaxian
- Gun Smoke
- Centipede
- Gyruss
- Hustler
- Jumping Jack
- Juno First
- King & Balloon
- Ladybug
- Mappy
- Millipede

- Moon Cresta
- Mr. Do
- Mr. Do's Castle
- New Rally X
- Pengo
- Phoenix
- Pinball Action
- Pleiades
- Pooyan
- Qix
- Scramble
- Shao-Lin's Road
- Space Invaders
- Space Panic
- Super Breakout
- Super Cobra
- Tank Battalion
- The End
- Time Pilot
- Van-Van Car
- Video Pinball
- Xevious
- Zaxxon

# User Guide

## Product Features

- 1) Screen (covered by a tempered glass top)
- 2) Player Control Panel
- 3) On/Off Switch & Power Cable
- 4) Coin Mechanism
- 5) Coin Collector (Open the panel underneath the access panel)
- 6) Access Panel

 


# User Guide

## Control Panel

- 1) Joy Stick
- 2) Start
- 3) A
- 4) B
- 5) C

There are two control panels, one at either end of the arcade machine.

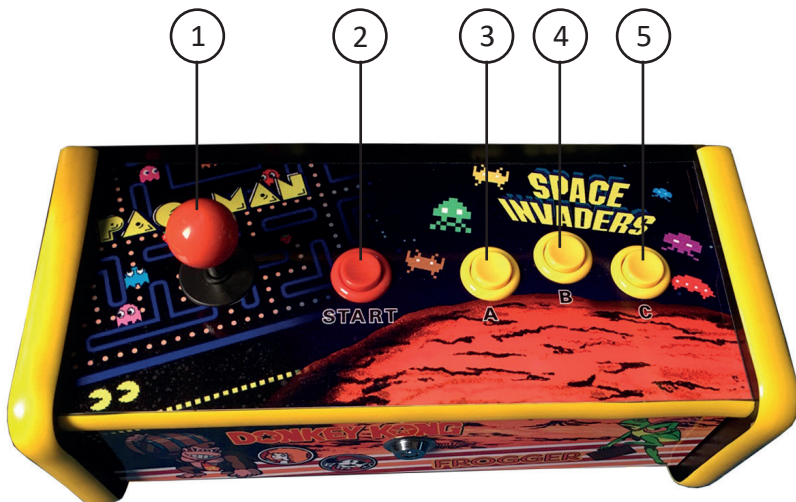

# User Guide

## Operation Instructions

Carefully remove the packaging and plug in the unit.

Flip the ON/OFF switch to turn the unit on. The game will go through a test mode and test all 60 games. Once complete, the game screen will appear.

### 1) Playing a game:

Free Mode: Move the joystick through the 10 pages of games. Use the joystick to highlight a game and press start to play.

Coin Mode: You must insert a coin to gain credit. Move the joystick through the 10 pages of games. Use the joystick to highlight the game and press start to play.


Your arcade games machine will arrive already in freeplay mode.

### 2) Programming the unit:

Programming the unit involves changing the settings, such as freeplay or coin mode, display, volume and game settings.

To access the system set up mode, follow the instructions below:


- 1) Make sure the unit is turned off.
- 2) Use the provided key to open the access panel.
- 3) Look inside the access panel for the blue dipswitch located on the control panel.

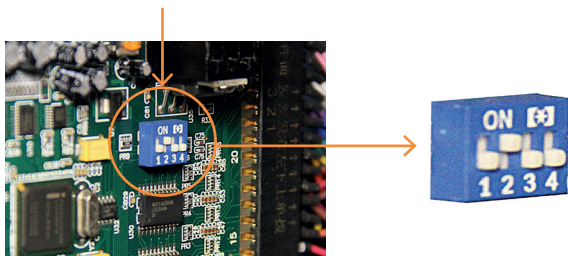

# User Guide

## Operation Instructions


4) Move the fourth switch, on the dipswitch, upwards. Use the images to help you.

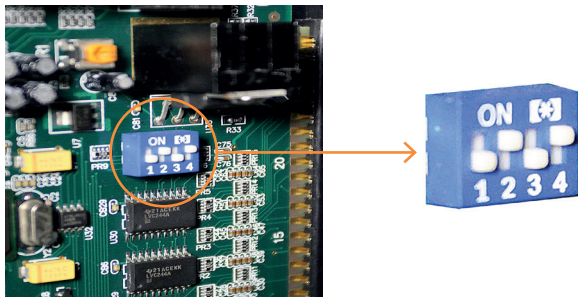

5) Close the access panel and turn the unit back on.

The machine should now have entered the system set up mode.

When in set up mode, the control panel buttons A, B and C, become S1, S2 and S3. You will use these buttons and the joystick to navigate yourself through the setup menus and options.

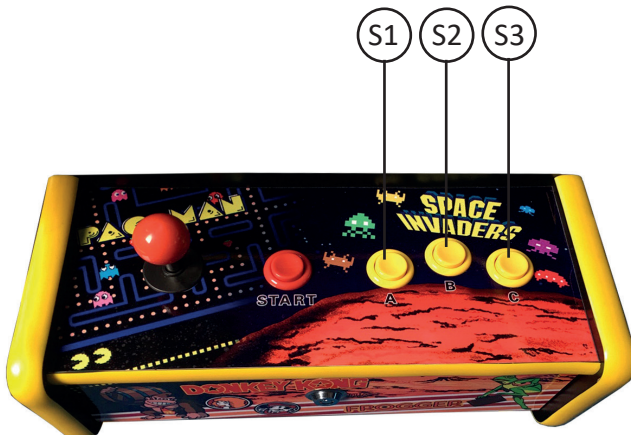

# User Guide

## Operation Instructions

### PCB DIP SWITCH SETTINGS:

DIPSW3		1	2	3	4
Screen Orientation	Normal	OFF			
	Flip Screen	ON			
Display Mode (CRT)	CGA-15.75Khz		OFF		
	VGA-31.5Khz		ON		
High Score Saver	Disabled			OFF	
	Enabled			ON	
System Mode	Normal Mode				OFF
	Test Mode				ON

The above settings will allow you to tune your screen size.

If the High Score Saver is enabled, you will be able to clear all previous high scores. To clear the high scores, enter the system set up mode and go to the High Score Saver Page. Press the start button and S1 to clear the scores.

### 3) Saving your changes:

To save any changes you have made while in the system set up mode, press the start button. 'Setup OK' will appear on the screen when your changes have been successfully saved.





# User Guide

## Operation Instructions

System DIPSW Setup for Coin Operation Player 1:

	DIPSW1	1	2	3	4	5	6	7	8
Coin 1	1 coin 1 credit	OFF	OFF	OFF	OFF				
	1 coin 2 credit	ON	OFF	OFF	OFF				
	1 coin 3 credit	OFF	ON	OFF	OFF				
	1 coin 4 credit	ON	ON	OFF	OFF				
	2 coin 1 credit	OFF	OFF	ON	OFF				
	2 coin 2 credit	ON	OFF	ON	OFF				
	2 coin 3 credit	OFF	ON	ON	OFF				
	2 coin 4 credit	ON	ON	ON	OFF				
	3 coin 1 credit	OFF	OFF	OFF	ON				
	3 coin 2 credit	ON	OFF	OFF	ON				
	3 coin 3 credit	OFF	ON	OFF	ON				
	3 coin 4 credit	ON	ON	OFF	ON				
	4 coin 1 credit	OFF	OFF	ON	ON				
	4 coin 2 credit	ON	OFF	ON	ON				
4 coin 3 credit	OFF	ON	ON	ON					
4 coin 4 credit	ON	ON	ON	ON					

# User Guide

## Operation Instructions

### 5) Programming the Games:

Using the control panel you will be able to look at each game's set up mode. You can change a number of things within each game, such as number of lives, difficulty and speed. Change these settings to suit you.

Remember to save your changes.

### 6) Adjusting the Volume:

The Volume Adjustment page is located after the game's set up menus. You will have to scroll through the games to reach it. Press S2 and S3 to move backwards and forwards through the menus.

Once on the Volume Adjustment page you can use the joystick to adjust the volume.

Remember to save your changes.

### 7) Finished:

Once you have finished setting up, switch off the machine. Move the fourth switch on the blue dipswitch back to its original position.



Leave the unit for 1 minute before turning it back on. The unit should now be back to game mode and you can continue playing, but with your new settings.

# Troubleshooting

## Resolution Guide

Please read through the guide below if you have any issues or faults with your device. The information covers and resolves the majority of frequently asked questions.

**Q: There are parts missing from my order.**

A: If there appears to be any part missing from your package contact our Customer Support team via the details on the Contact Us page within 7 days of receipt.

**Q: The arcade machine will not turn on.**

A: Check that you have the correct power supply, and that it is supplying the correct voltage. Check that that power cord plug has not become loose.

**Q: There appears to be an electrical fault.**

A: Do not touch or tamper with any of the wires or components. Repair or maintenance of the inside of the arcade machine should only be carried out by skilled technicians.

**Q: The machine is not accepting coins.**

A: Check that the machine is not in freeplay mode. If it is still in freeplay mode, you will need to change it to coin mode. Make sure you are inserting the correct coin.

For all other issues please contact our Customer Support department via the details on the Contact page.

# Safety Advice

## Safe Working Practice

Please read through the safe working practice to ensure prevention of injury or damage to the device.

Do not use the machine if the adaptor wire is frayed or damaged.

When the device is not in use, ensure that the power plug is removed from the socket. This will prevent damage to the appliance through power surges.

Clean this product after every use and unplug the appliance from the wall whilst cleaning. Do not use abrasive substances to clean the tempered glass, as this could damage it.

Repair or maintenance of the inside of the machine should only be carried out by skilled technicians.

Tampering with the components and settings beyond what is required for set-up may void your warranty.

Do not operate the device in areas of high temperature or humidity as the machine may not function correctly.



# Contact Us

## Sales Department

For information regarding this device or other products from our Monster divisions please use the following details below.

Tel: 01347 878888

Email: [hello@monstershop.co.uk](mailto:hello@monstershop.co.uk)

## Support Department

For queries about this device, warranty, returns or reporting faults please use the following details below.

Tel: 01347 878887

Email: [help@monstershop.co.uk](mailto:help@monstershop.co.uk)

## Website

To view our product range and fantastic offers in the Monster divisions please visit our website

[www.monstershop.co.uk](http://www.monstershop.co.uk)

## Address

To visit our office Monster House and view our products, send postal correspondence or return items our address is provided below.

Monster House, Alan Farnaby Way, Sheriff Hutton  
Industrial Estate, Sheriff Hutton, York YO60 6PG



---

Monster Group (UK) is one of the UK's fastest growing online retailers. We supply a diverse range of products which offer exceptional value for money. We strive to provide the best possible customer experience with free UK delivery across all our products and a Monster Guarantee for 100% satisfaction.

Our dedicated customer service team will be more than happy to help with any questions you may have.

Home & Garden  
Storage Shelving  
Sign & Digital  
Retail & Hospitality  
Commercial Equipment

**Check out all our Monster brands at [www.monstershop.co.uk](http://www.monstershop.co.uk)**

---