
T-MECH 7HP Petrol Tiller 23780

110 x 95mm (to scale)

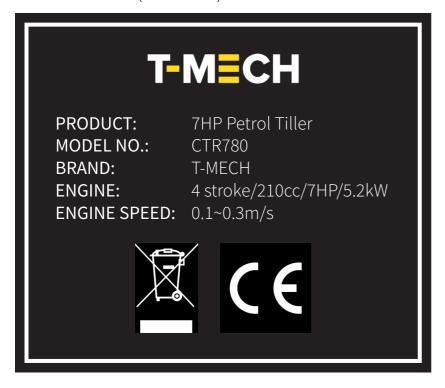

88 x 62mm (to scale)



88 x 62mm (to scale)

110 x 34mm (to scale)

AIR FILTER MAINTENANCE

Clean element every 50 hours depending on conditions. Wash in high flash-point solvent, dry and then dip in clean engine oil. Squeeze out any excess oil.



125 x 50mm (to scale)

A CAUTION

- Check the oil level before starting the machine.
- Put it in the neutral position before starting the engine.
- Do not operate indoors or in poorly ventilated places.