
### 80 x 50mm

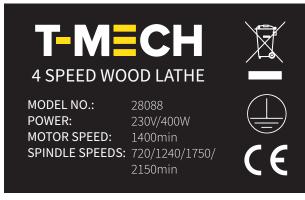

#### 65 x 45mm

## WARNING

- 1. READ INSTRUCTION MANUAL BEFORE USE.
- 2. WEAR EYE PROTECTION.
- 3. DO NOT WEAR LOOSE CLOTHING WHILE
- OPERATING THIS MACHINE.
- 4. KEEP TOOLS SHARP AND CLEAN FOR BEST AND SAFEST PERFORMANCE.
- 5. DISCONNECT MACHINE BEFORE
- REMOVING PULLEY COVER.



90 x 50mm

### **SPEED ADJUSTMENT**

WARNING: DISCONNECT THE MACHINE FROM THE MAINS BEFORE PERFORMING ANY MAINTENANCE OR ADJUSTMENTS.

# THE SPEED OF THE LATHE IS ADJUSTED BY CHANGING THE DRIVE BELT PULLEY IN THE MOTOR UNIT.

OPEN THE BELT COVER ON THE FRONT SIDE OF THE MOTOR HOUSING. UNDO THE FOUR BOLTS THAT HOLD THE DRIVE PULLEY IN PLACE. PUSH THE DRIVE PULLEY UPWARDS UNTIL THE DRIVE BELT LOOSENS. PLACE THE BELT ON ANOTHER PULLEY, THIS MUST RUN PARALLEL. PULL THE DRIVE GEAR DOWN A LITTLE UNTIL THE DRIVE BELT IS TAUT. FASTEN THE DRIVE GEAR IN THIS POSITION BY TIGHTENING THE FOUR BOLTS AROUND THE PULLEY AGAIN.