



ETMF01

KuKoo Candy Floss Machine

KuKoo

Try **Monster** - Buy **Monster** - Be **Monster**

Specification

Product Description

The KuKoo Candy Floss Machine is an easy to use appliance and the retro pink design makes it perfect for amusements, arcades, fairs, functions and events. It can produce a large amount of candy floss from a small amount of sugar, giving you excellent and profitable results. With an additional built-in drawer you can store packets of sugar, wooden sticks and any takings, all will be tucked away neatly and safely underneath the machine.

The compact electrical appliance and the 50cm stainless steel bowl can fit perfectly into restricted spaces in order to produce candy floss in a busy environment.

Item Contents

Candy Floss Machine, 50cm diameter stainless steel bowl, 13A 3 pin plug power cable.

Technical Information

Voltage: 220V

Power: 900W

Product Specifics

Weight: 13kg

Bowl diameter: 50cm

Height (inc. bowl): 47cm

Machine dimensions: 32.5cm D x 32.5cm W x 30cm H

Monster Guarantee

If you wish to return a product in perfect working order, we provide a 30 day returns policy as long as the item is unopened and in a resalable condition.


A 12 month warranty applies to all of our electrical products; we will cover the cost of labour and parts. Our policy is to try and repair the item before arranging an exchange or refund.

If for any reason a part is missing please get in touch with us within 7 days on receipt of your order. You can contact our friendly and helpful Customer Support Team via email or call. For full terms and conditions contact our Support Department via the details on the Contact Us page.

Specification

Product Features

- 1) Stainless Steel Bowl
- 2) Hinges: Secure/detach the stainless steel bowl from the machine
- 3) Candy Floss Machine
- 4) Temperature Display: Shows the temperature of the heating element
- 5) Heat Switch: Controls the heating element
- 6) Power Switch: Controls the spinning hopper
- 7) Built in Drawer
- 8) Spinning Hopper: Holds sugar in the centre and spins to create candy floss

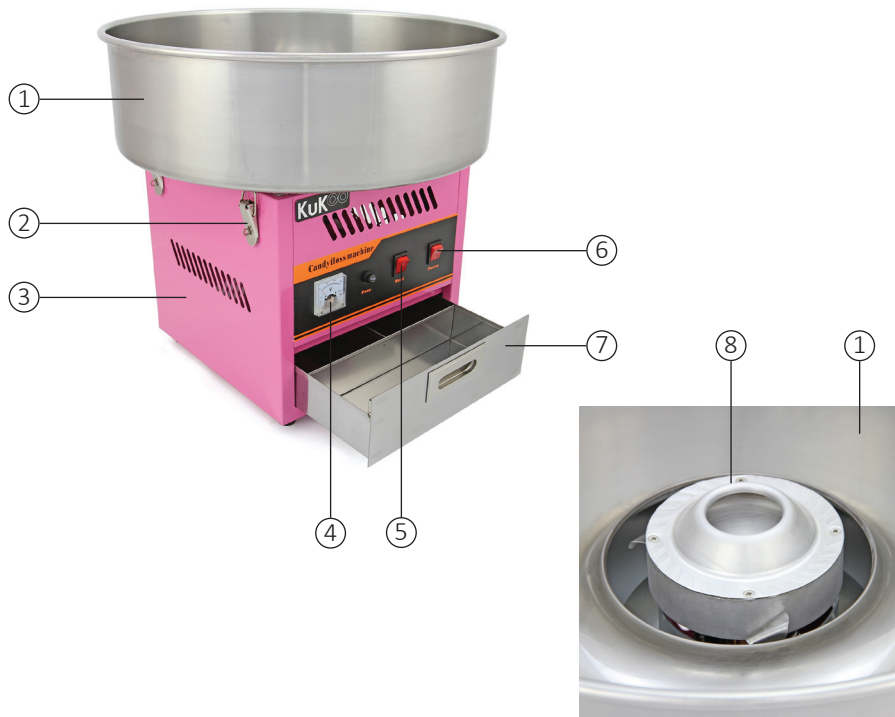

User Guide

Operation Instructions

1) Before use, you should wash the main components of the candy floss machine to ensure your candy floss is safe and hygienic for customers to eat. Unscrew the hopper lid in the centre of the machine and unhinge the stainless steel bowl, rinse them in water. Wipe out the inside of the hopper bowl with a soft cloth. Do not detach this or submerged it in water as it has electrical components.

2) Once everything is completely dry you can begin making candy floss. The stainless steel bowl can be secured onto the machine by slotting the hooks, which are on the base of the bowl, into place above the hinges on either side of the appliance. These hinges should then be fastened to keep the bowl still as your candy floss is spun.

3) Position on a flat and clean surface and plug into your power socket. Turn on the appliance using the power switch; this will activate the spinning hopper. Turn on the heating element using the heat switch and leave both switches turned on for 5 minutes, to allow your machine to heat up before you add any sugar.

4) The amount of sugar you will need to use varies on your personal needs, but candy floss can be made with a little or a lot of sugar. However, overfilling the hopper will cause the sugar to burn. Pour the sugar into the hole in the middle of the hopper and carefully brush/wipe any spilt sugar from the top or sides of the hopper. The sugar should begin to form candy floss.

5) Using your candy floss stick, dip into the sugar strands forming above the hopper and once they begin to attach you can hold it to the side whilst spinning the stick in your hand or around the bowl to collect the sugar as it spins.

6) When topping up the sugar inside the hopper, be careful as the hopper will be warm. If you are changing colours you may want to clean out the bowl and wipe inside the hopper to stop the colours from merging. Serve immediately or store in air tight bags.

Troubleshooting

Resolution Guide

Please read through the guide below if you have any issues or faults with your appliance. The information covers and resolves the majority of frequently asked questions.

Q: The machine is vibrating and shaking as the hopper spins.

A: If you find that your machine is vibrating or shaking when you turn the hopper on, you may need to adjust the drive belt. This is located in the motor underneath the hopper and is a clear circular band. Remove the drive belt and turn it inside out so that the ridged side is facing out and the smooth side is facing in, towards the pulleys. If the problem continues please contact our Support department via the details on the Contact page.

Q: Candy floss is blowing out of the machine as it spins the sugar around.

A: If you find that candy floss blows out of the machine, this can mean that too much has collected around the edge of the bowl. Try spinning the stick around the edge of the bowl to collect the excess before continuing. When operating in outdoor environments you may need to purchase a dome cover for your machine to stop excess candy floss from blowing away. These are available on the Monster Chef website , alternatively you can purchase them direct through our Sales department via the details on the Contact page.

Q: Sugar is burning inside the hopper or around the inside of the bowl.

A: If you smell burning or the sugar is burning inside the hopper and bowl, you may be overfilling the hopper with sugar. When the machine is cool, wipe out the main bowl and the hopper bowl. Try using less sugar, you will be surprised how little sugar can make a good portion of candy floss and you may need to experiment with different amounts to find the optimum production rate.

If you have any other questions please contact our Customer Support team via the details on the Contact page.

Safety Advice

Safe Working Practice

Please read through the safe working practice to ensure prevention of injury or damage to the device.

Do not operate the device in areas of high temperature or humidity as the machine may not function correctly.

Do not use the machine if the adaptor wire is frayed or damaged.

When the device is not in use ensure that the power plug is removed from the socket. This will prevent damage to the appliance through power surges.

When the machine is in operation do not touch the hopper as this will get hot and is a burn hazard.

Do not touch the inside of the bowl when the machine is turned on.

Clean the bowl after use, wait until the machine is cool before handling. The hopper lid should not need to be removed after each use. When cool simply wipe any sugar away from inside the hopper and around the lid.

Do not move the machine when it is turned on.

To extend the life of the motor, avoid running it continuously for long periods of time. It is recommended that the motor be switched off for 20 minutes to cool down after each hour of operation.

Do not let children use the machine, regardless of supervision or if the machine is switched off.

Do not wash the bowl with soap, as soap residues may mix with the candy floss. Remove the bowl before cleaning with water to avoid any contact with electrical components.



Contact Us

Sales Department

For information regarding this device or other products from our Monster divisions please use the following details below.

Tel: 01347 878888

Email: hello@monstershop.co.uk

Support Department

For queries about this device, warranty, returns or reporting faults please use the following details below.

Tel: 01347 878887

Email: help@monstershop.co.uk

Website

To view our product range and fantastic offers in the Monster Chef division please visit our website

www.monstershop.co.uk

Address

To visit our office Monster House and view our products, send postal correspondence or return items our address is provided below.

Monster House, Alan Farnaby Way, Sheriff Hutton
Industrial Estate, Sheriff Hutton, York YO60 6PG



Monster Group (UK) is one of the UK's fastest growing online retailers. We supply a diverse range of products which offer exceptional value for money. We strive to provide the best possible customer experience with free UK delivery across all our products and a Monster Guarantee for 100% satisfaction.

Our dedicated customer service team will be more than happy to help with any questions you may have.

Home & Garden
Storage Shelving
Sign & Digital
Retail & Hospitality
Commercial Equipment

Check out all our Monster brands at www.monstershop.co.uk
