

# **MAINTAIN AIR CLEANER**

**Clean the cleaner core once every 50 hours of use (every 10 hours for unusually dusty circumstances) and then immerse in clean engine oil until saturated, squeeze out excessive oil.**