



# Baking Oven Timer Replacement

- 1) Turn the oven off, disconnect it from the power supply and allow the appliance time to cool.
- 2) Unscrew the two screws located underneath the oven door.



- 3) Unscrew the 5 screws located underneath the front of the oven. This front panel should now pull away slightly to give you access to the rear of the timer.



4) Pull the control knob away from the timer housing.



5) Inside the timer you should see two screws, unscrew these to loosen the timer.

6) Underneath the timer there are two connectors. One holds a single wire whilst another holds two wires. Remove these two connectors and take out the old timer.

7) Take the new timer and attach the connectors, these can go on either terminal.

8) Then put the new timer back into place and replace the two screws removed in step 5.

9) Put the front panel of the oven back into place and replace the screws removed in step 3 and 2.

10) Push the timer control knob back onto the timer.

Once the timer is connected turn on the oven and test the new timer.

If you find you are having any other issues with your KuKoo Baking Oven please contact our Customer Support team who will be happy to help.

Phone: 01347 878887

Email: [support@monstergroupuk.co.uk](mailto:support@monstergroupuk.co.uk)