



## **Catering Can Opener Instructions**

Please read carefully and retain this leaflet

**Models:**

 
1525-6 (for cans up to 360mm high)

1525-7 (for cans up to 560mm high)


## OPERATING INSTRUCTIONS

To obtain best results from your Genware Can Opener please follow our operating, cleaning and maintenance instructions.


**NB: Badly damaged can rims should be straightened before opening.**

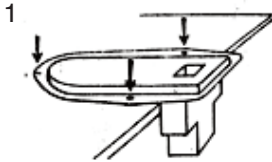

 
1. Affix platform securely to a firm work surface, using bolts provided and/or the screw clamp.

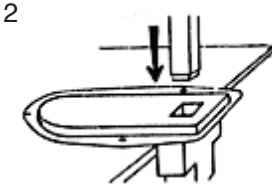

 
2. Slide can opener tube through aperture in platform.

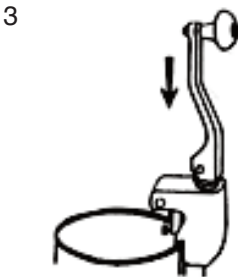

 3. Position can on platform and, with handle in vertical position, punch blade through lid. Ensure blade is fully inserted into can and can opener body is resting on top of can.

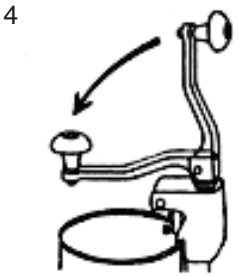

 4. Lower handle through 90 degrees into horizontal position.

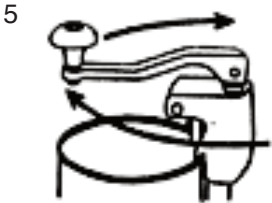

5. Open can by turning handle clockwise. Raise handle back to vertical position to release and remove can.

## CLEANING INSTRUCTIONS

Can openers should be cleaned on a regular basis, appropriate to the amount of use.

Clean with hot water and brush, rinsing with clean water. Detergents or soap etc can affect durability of plated surfaces.

Dry can opener thoroughly.

Wheel contact surfaces may be protected against corrosion with vegetable oil.

## MAINTENANCE INSTRUCTIONS

A. Blade – check for wear regularly. Test the cutting edge for evidence of grooves or nicks. If the blade is worn, change immediately.

Wheel – check gear teeth for wear. A can opener will tend to 'slip' in operation if gear is worn. If the wheel is worn, change immediately.



Platform – check the platform is always secure. Any movement in the platform can affect the smooth operation of your can opener.