Log Splitter Instruction Label Label - 90 x 40mm

Before starting the log splitter, the bleed screw should be loosened by some rotations.

Before moving the log splitter, make sure the bleed screw is tightned to avoid oil leak from the hole.

