

# 3-TONNE LONG RAM JACK

## OPERATION INSTRUCTIONS

- TO RAISE, TURN THE RELEASE-VALVE SLOWLY TO THE RIGHT.
- TO LOWER, TURN THE RELEASE-VALVE SLOWLY TO THE LEFT.
- TO ADD OIL, FULLY COLLAPSE JACK AND ADD OIL TO INCREASE OIL LEVEL UP TO OIL PLUG.
- USE ONLY HYDRAULIC JACK OIL.



## CAUTION



- USE ONLY FOR LIFTING PURPOSES. DO NOT USE FOR SUPPORTING LOADS.
- PROMPTLY SUPPORT LOAD AFTER JACKING WITH APPROPRIATELY RATED SAFETY STANDS OR EQUIVALENT BLOCKING.
- DO NOT OVERLOAD THIS JACK BEYOND ITS RATED CAPACITY.