



TROUBLE SHOOTING

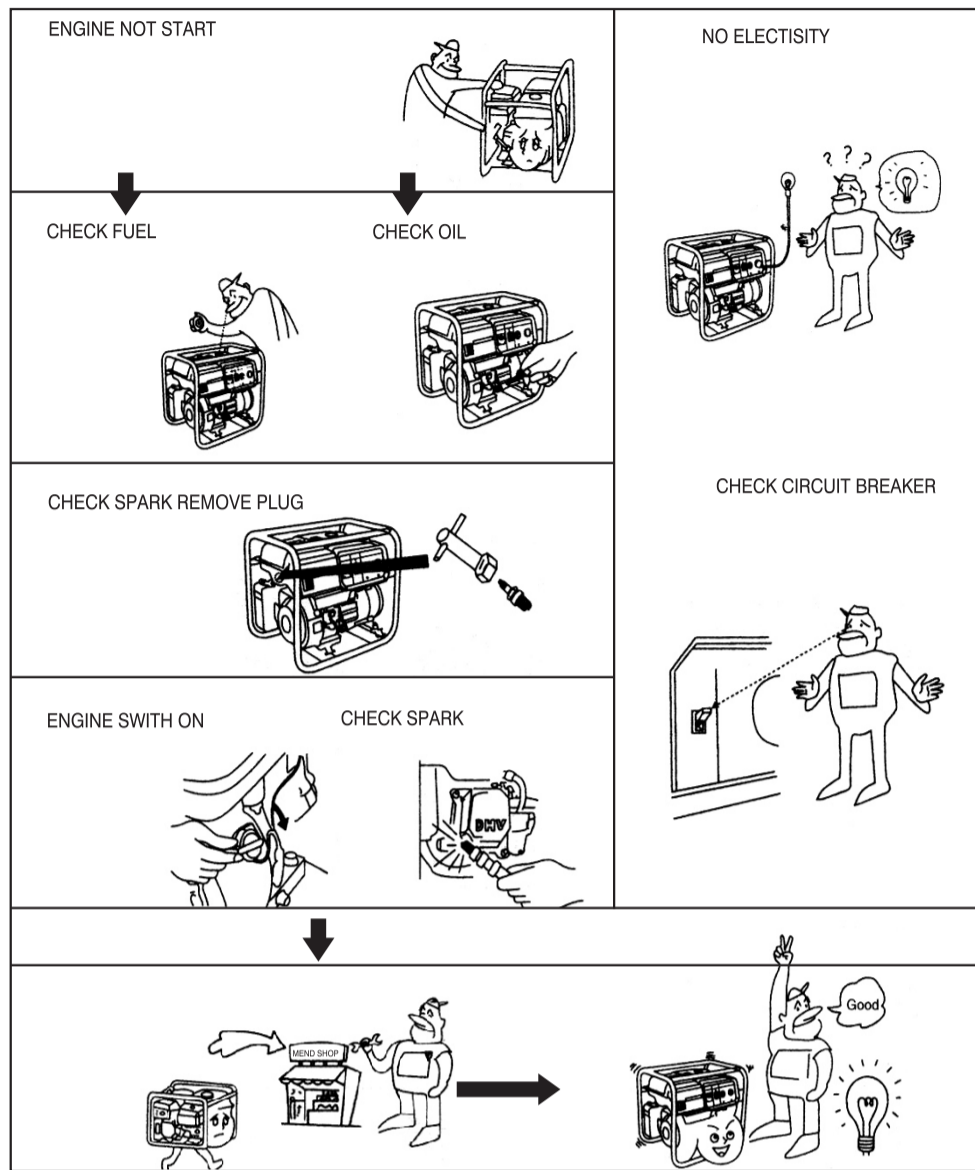


GENERATOR

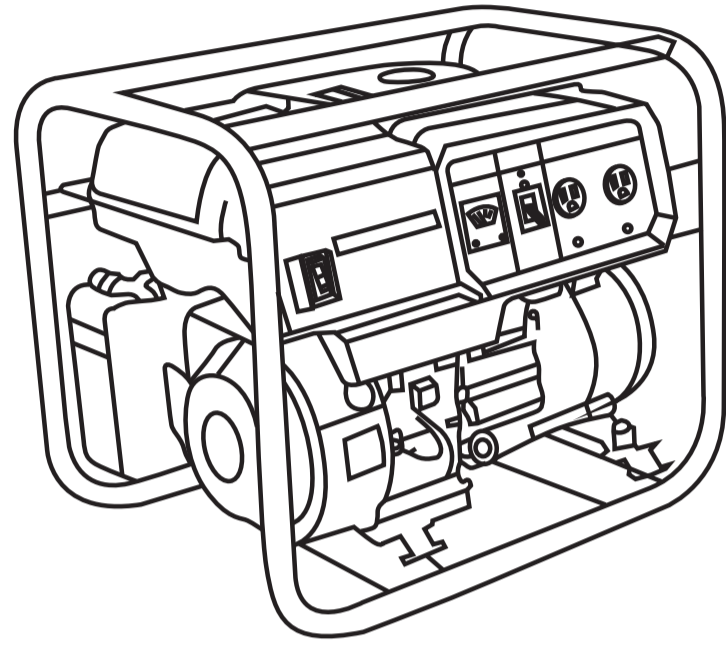


OWNER'S MANUAL

SAFETY

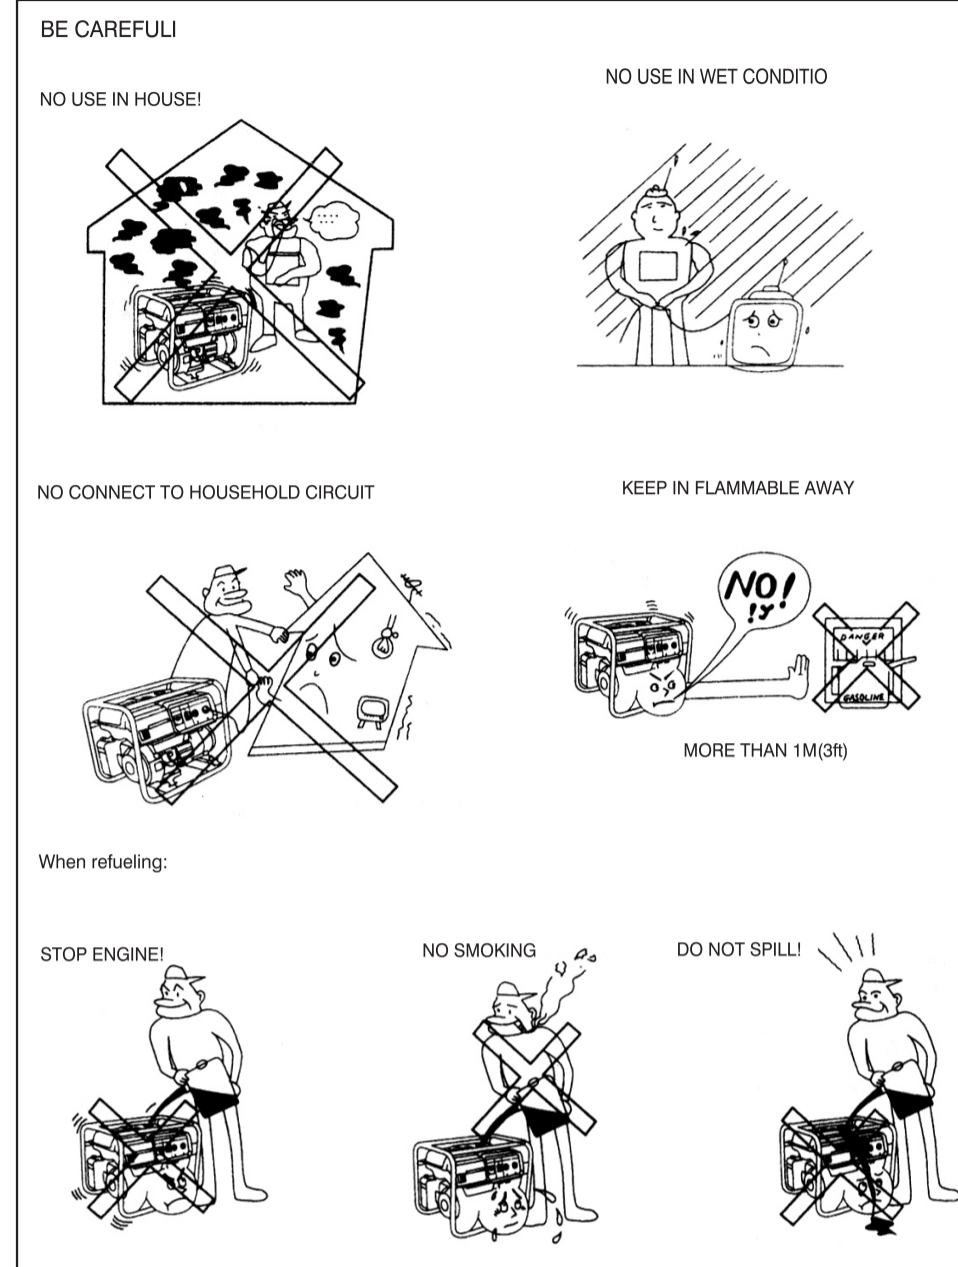


-1-

MAINTENANCE

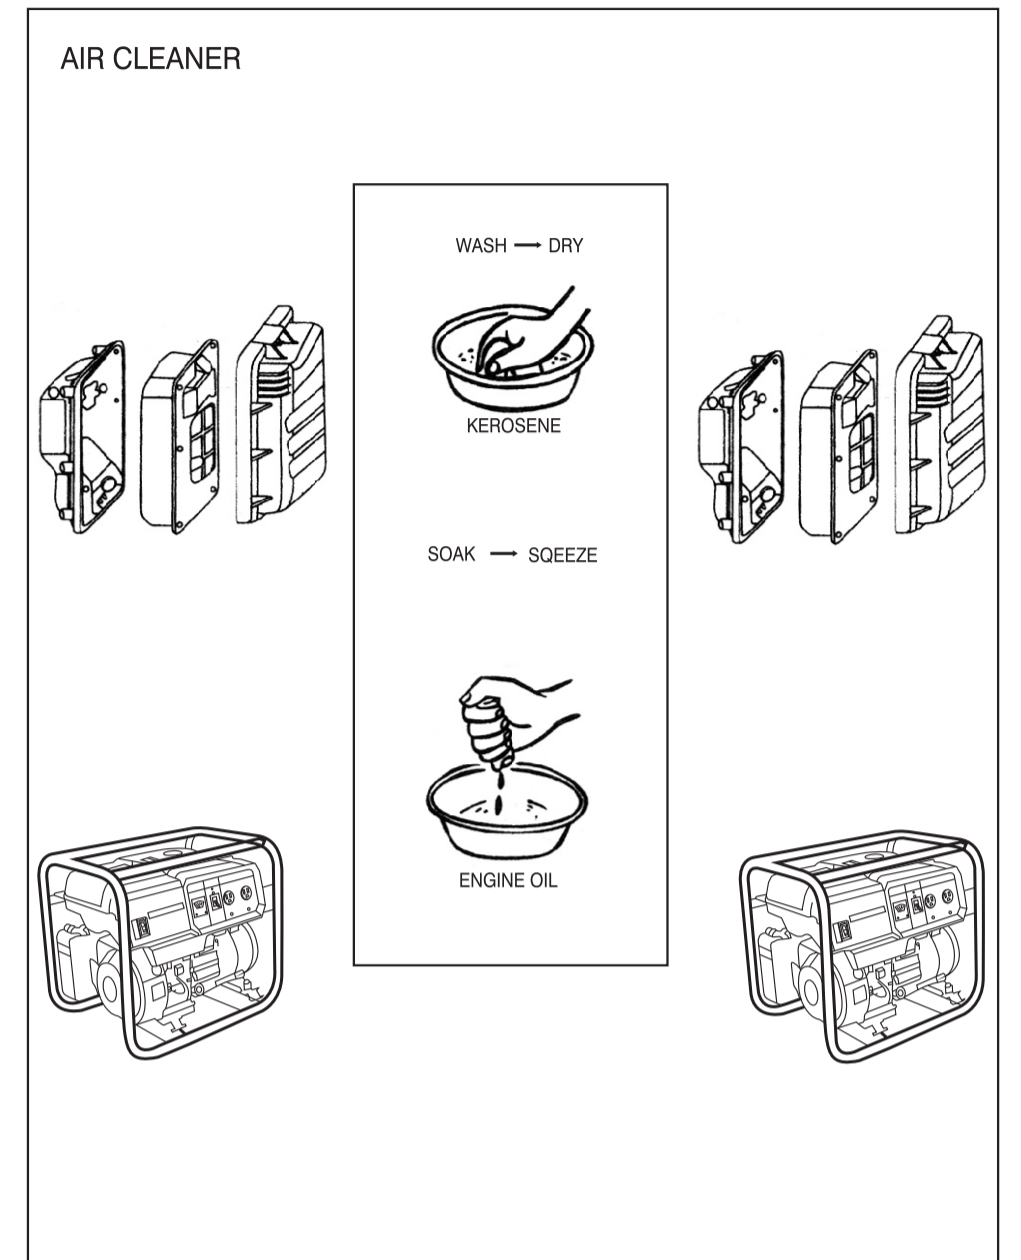


-6-

MAINTENANCE

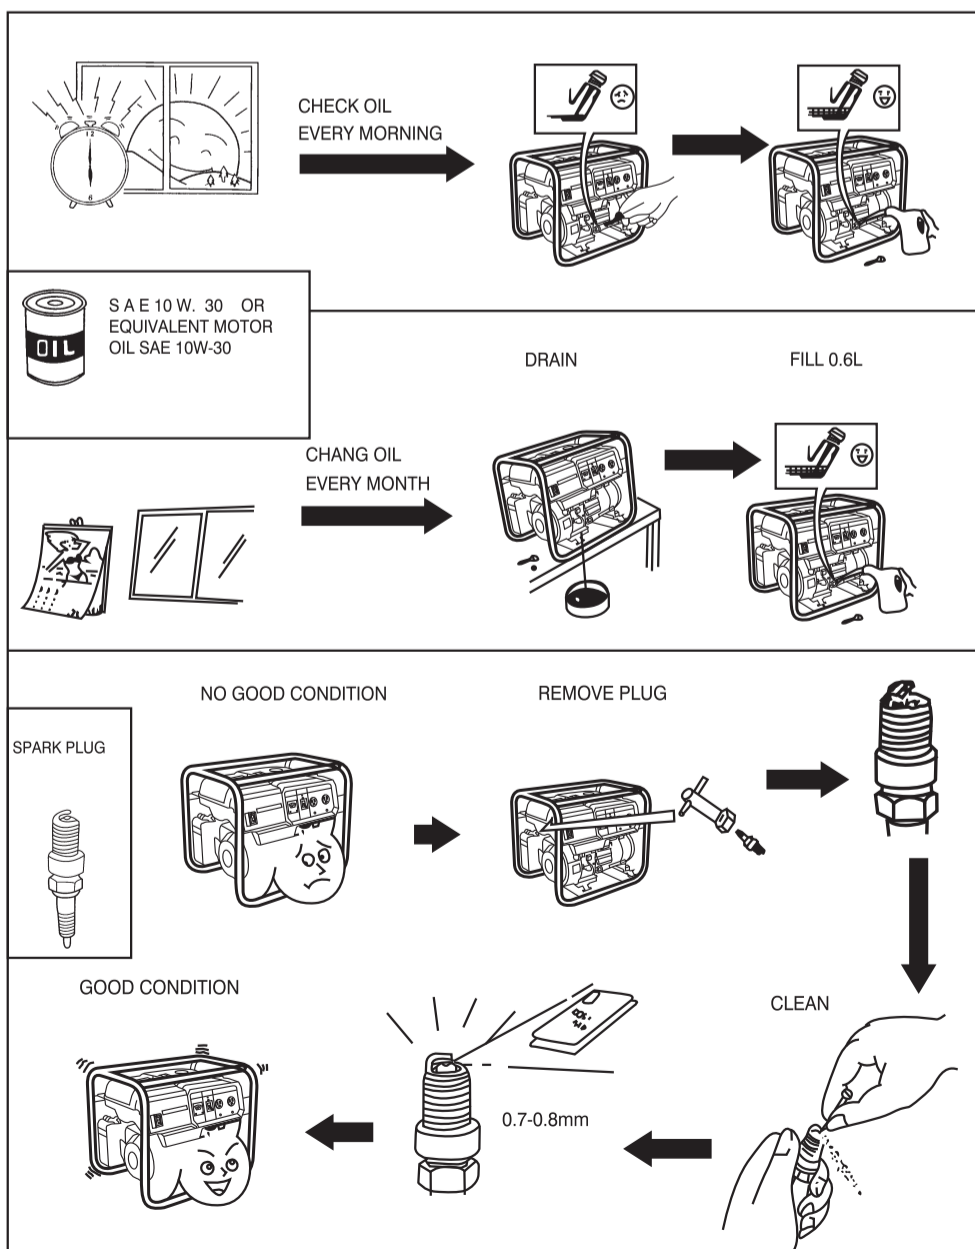


-5-

USE GENERATOR

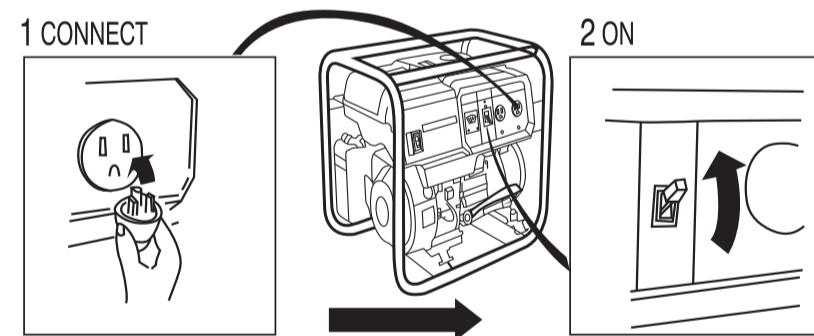


-2-

START ENGINE

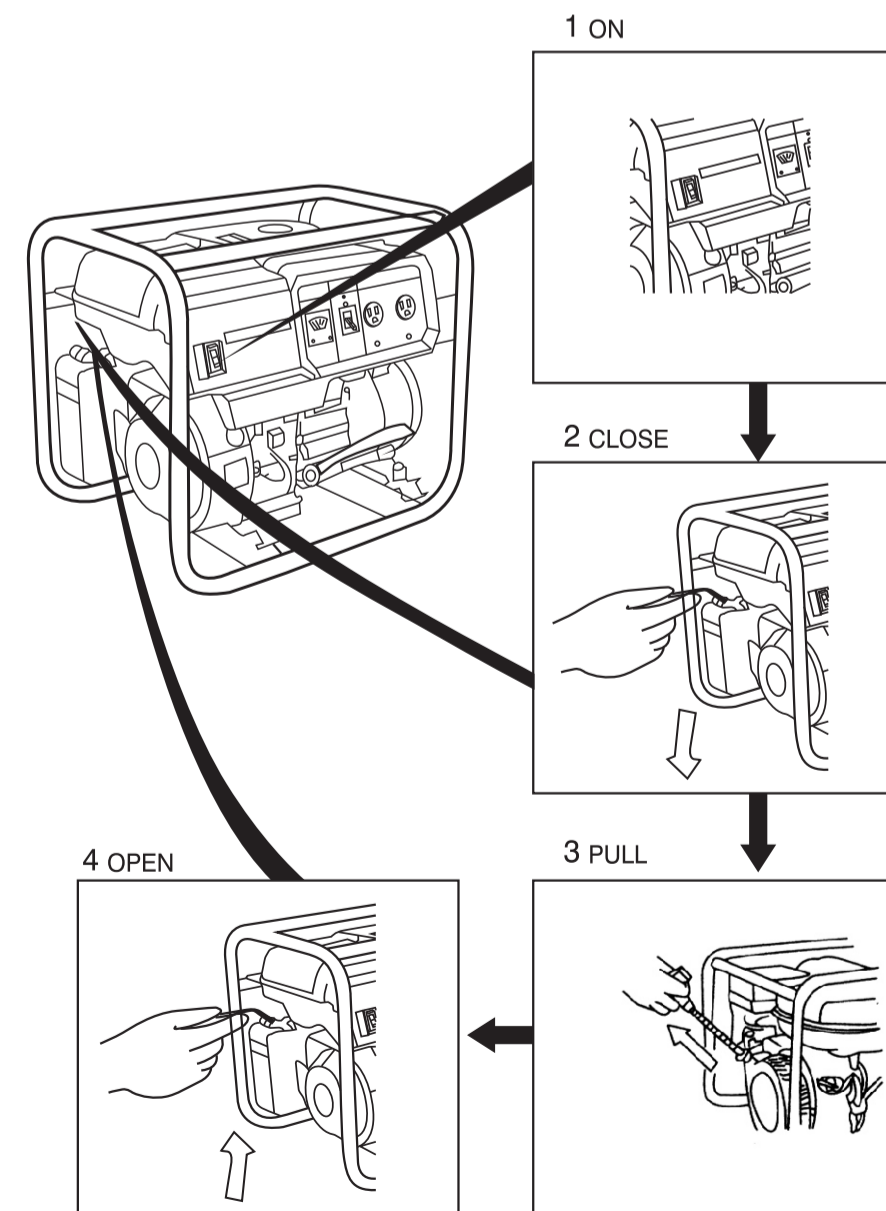

-3-

STOP ENGINE

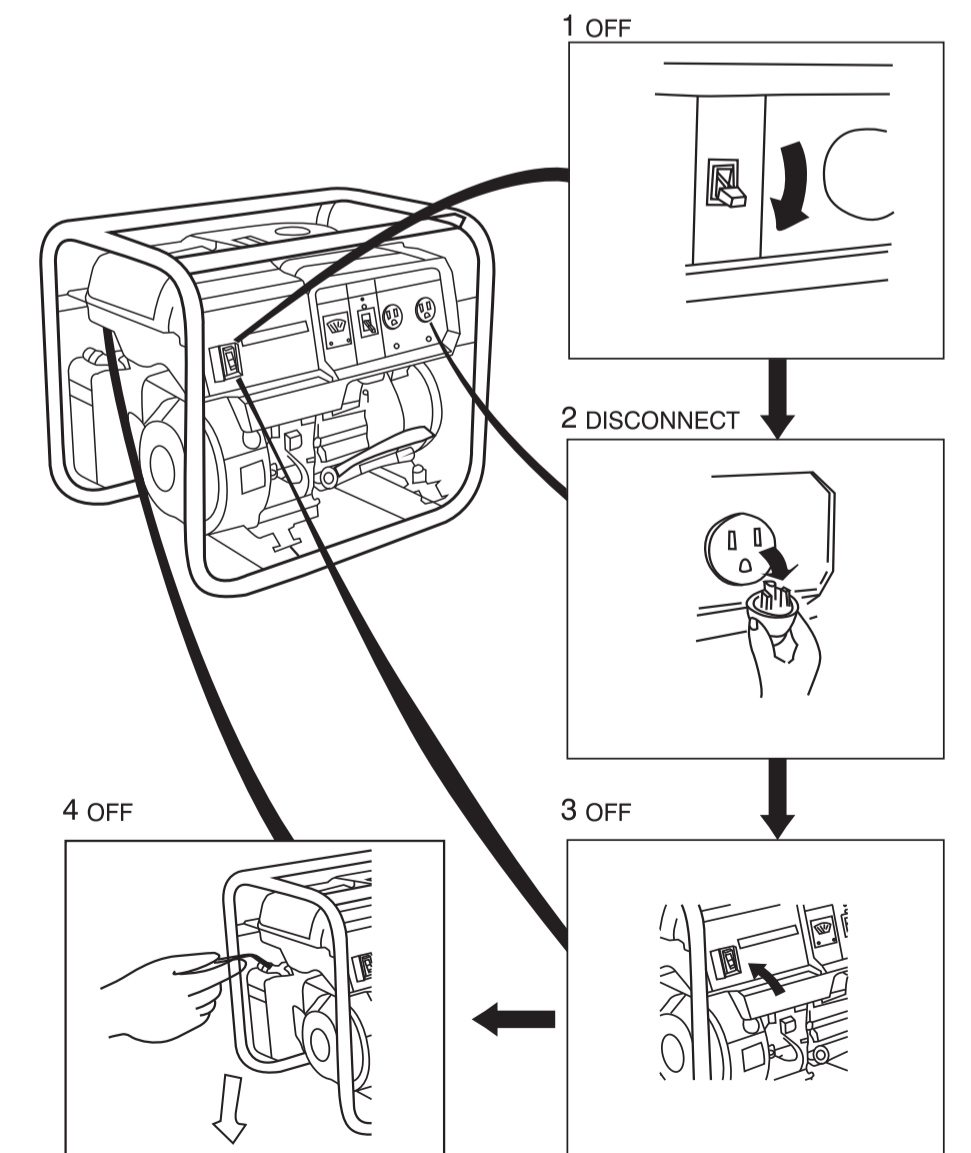

-4-