

PARTS LIST

PART NO.	PART NAME	PART NO.	PART NAME	PART NO.	PART NAME
1	Bolt	36	Connecting rod	71	LED Lighting
2	Torsion Spring	37	Pin	72	Holzer C
3	Copper Spacer A	38	Pivoted Axle	73	Firing Mode Select Knob
4	Copper Tube	39	Main Switch	74	Control Unit
5	Revolving shaft	40	Spring	75	Holzer D
6	Copper Spacer B	41	Start Trigger	76	Holzer Cover
7	Link stopper	42	Holzer B	77	Bolt
8	Bolt	43	Spring	78	Bolt
9	Self-locking nut	44	LED Lighting Switch	79	Driver Guide Cover
10	Copper Spacer C	45	Bolt	80	Safety
11	Pendulum bar	46	Bracket Support	81	Non marring Pad
12	Spacer A	47	Bracket Support Bearing	82	Pressure Adjustment Board
13	Spacer B	48	Connecting Rod	83	Bolt
14	Bolt	49	Gear A (4pcs)	84	Bolt
15	Seal	50	Gear Tray A	85	Driver Guide
16	Little Cylinder	51	Gear B (7pcs)	86	Bolt
17	O-Ring	52	Gear Tray B	87	Nose A
18	Seal	53	Inner Gear A	88	Nose B
19	Piston	54	Inner Gear B	89	Pin
20	Magnet	55	Spacer	90	Fixed Magazine
21	Driver piston	56	Motor Cover	91	Iron Wire
22	Driver Blade	57	Bear Axis	92	Support
23	Holzer Cover	58	Motor	93	Bolt
24	Holzer A	59	Body A	94	Click Lever
25	Bumper	60	Body B	95	Spring
26	Bolt	61	Bolt	96	Magnet
27	Cylinder upper Cover	62	Belt Hook	97	Nail Feeder
28	Seal	63	Bolt	98	Window Plastic Piece
29	Cylinder Cover	64	Power Connector	99	Spring
30	Seal	65	Battery	100	Moveable Magazine
31	Big Cylinder	66	Safety Switch	101	End Cover
32	Seal	67	Spring	102	Bolt
33	Piston	68	Safety Core	A	Driver Unit
34	Hollow shaft	69	Depth Adjustment Wheel		
35	Bolt	70	Screw		

