RATTAN CORNER DINING SET 25260 / 25261 / 25262 INSTRUCTION MANUAL

www.monstershop.co.uk

SPECIFICATION

PRODUCT DESCRIPTION

Thank you for purchasing this Rattan Corner Dining Set, the perfect garden accessory. This fasionable set provides an ample seating area, ideal for large gatherings and parties. It is also low maintenance and easily cleaned with a damp cloth.

With a free rain cover, the Rattan Corner Dining Set is protected from all inclement weather and climates, the set also contains UV stabilisers to protect it from the sun.

Please refer to and read the Safe Working Practice to ensure prevention of injury or damage to the device before starting.

PRODUCT SPECIFICS

 TABLE DIMS.:
 700 x 12

 L SHAPED SOFA DIMS.:
 1800 x 2

 STOOL DIMS.:
 400 x 40

 SEAT CUSHION THICKNESS:
 50mm

 BACK CUSHION THICKNESS:
 50mm

700 x 1200 x 660mm 1800 x 2400 x 700mm 400 x 400 x 330mm 50mm

ITEM CONTENTS

- $19\,$ x ø6 x 50mm Nut and Bolt
- 24 x ø6 x 25mm Screws
- 52 x Washer
- 24 x ø6 x 35mm Screws
- 1 x ø4 Allen Key
- 1 x Spanner
- 12 x Corner Feet
- 4 x C Clip
- 3 x Sofa Long Back Piece
- 1 x Sofa Short Back Piece
- 2 x Armrest
- 2 x Sofa End Panel

- 3 x Sofa Front Panel3 x Sofa Seat Panel
 - 6 x Sofa Seat Cushion
 - 6 x Sofa Back Cushion

 - 2 x Table Leg
 - 1 x Glass Table Top
 - 1 x Table Top Base
 - 6 x Stool Legs
 - 6 x Stool Sides
 - 3 x Stool Tops
 - 3 x Stool Cushions
- 1 x Rain Cover

SAFETY ADVICE O SAFE WORKING PRACTICE

Please read through the Safe Working Practice to ensure prevention of injury or damage to the device.

Do not use this product for anything other than its intended purposes.

Ensure you have read and fully understood the instruction manual and safety advice before using this product.

Do not apply bodyweight to this product before it is installed.

Keep small parts away from children.

Ensure this product is fitted correctly.


Use this product on a flat surface.


Do not expose this product to fire.


Do not allow this product to get excessively hot.


USER GUIDE ASSEMBLY INSTRUCTIONS

MIDDLE/CORNER SOFA ASSEMBLY

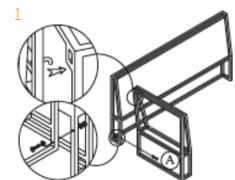

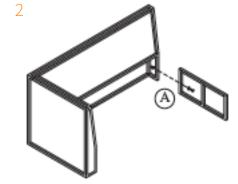


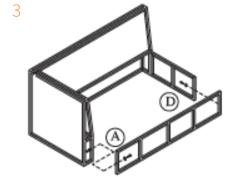


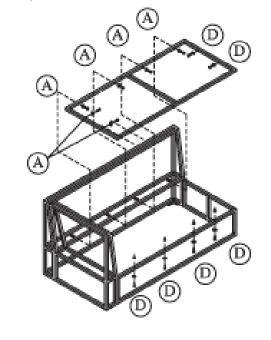



USER GUIDE ASSEMBLY INSTRUCTIONS


END SOFA ASSEMBLY

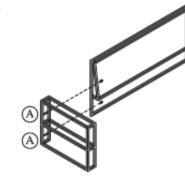

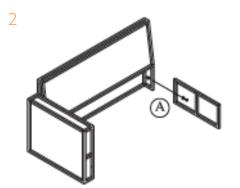

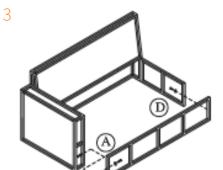

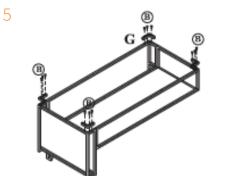

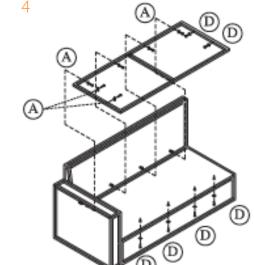


Please Note: This process needs to be repeated for the third section of the sofa, but the arm needs to go on the opposite/ right hand side of the seat.

5

USER GUIDE ASSEMBLY INSTRUCTIONS


STOOL ASSEMBLY

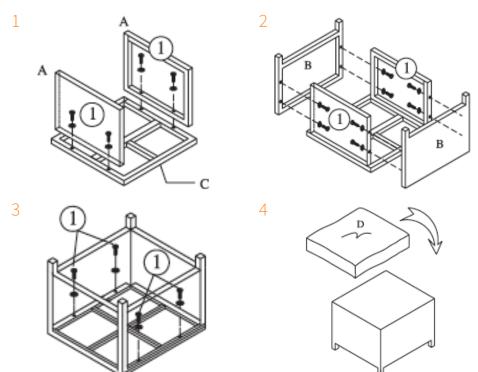


Please Note: This process needs to be repeated three times.

USER GUIDE ASSEMBLY INSTRUCTIONS

TABLE ASSEMBLY

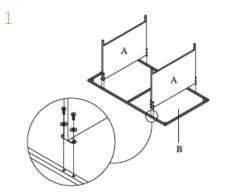


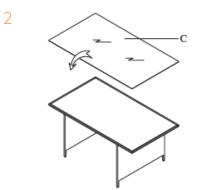




USER GUIDE ASSEMBLY INSTRUCTIONS

CONNECTING THE SOFA SECTIONS

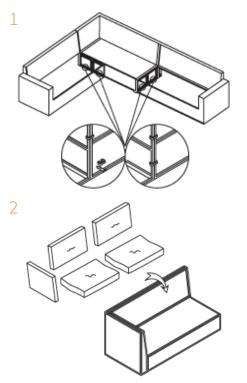

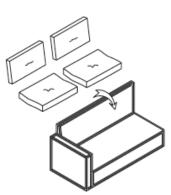

Please Note: The clips need to be attached

to the bottom frame of the sofas, one clip

The cushions can now be placed onto the

per space.

3

sofa sections.

MAINTANENCE

- Place the rain cover over the furniture when it is not in use to ensure the furniture and table does not get wet.
- Make sure the C-Clips secure the sofa sections together at all times.
- Check screws and bolts regularly to ensure the table top, stool and sofa components do not move.

TROUBLESHOOTING RESOLUTION GUIDE

WHAT DO I DO IF THERE ARE MISSING PARTS FROM MY ORDER?

If there appears to be any part missing from your order, contact our friendly and helpful Customer Support Team within 7 days of receipt.

WHAT DO I DO IF THE FURNITURE STARTS TO WOBBLE/MOVE?

The screws and bolts need to be checked regularly to ensure they are tight and secure. Retighten any screws or bolts that are moving or loose.

WHAT DO I DO IF THE SOFA SECTIONS START TO SEPARATE?

The C-Clips need to be checked regularly to ensure they are tight and secure. Replace any C-CLips that are broken and reattach any that are loose.

FOR ALL OTHER ISSUES, PLEASE CONTACT OUR CUSTOMER SUPPORT TEAM.