

Ensure that there is not any petrol spillage or fuel leakage. Make sure the engine has cooled down before filling with petrol. DO NOT fill the engine with fuel while the engine is running.