


Special Reminder


If the sealing film continues to rotate while using the machine, please make the following adjustments to the electronic eye.

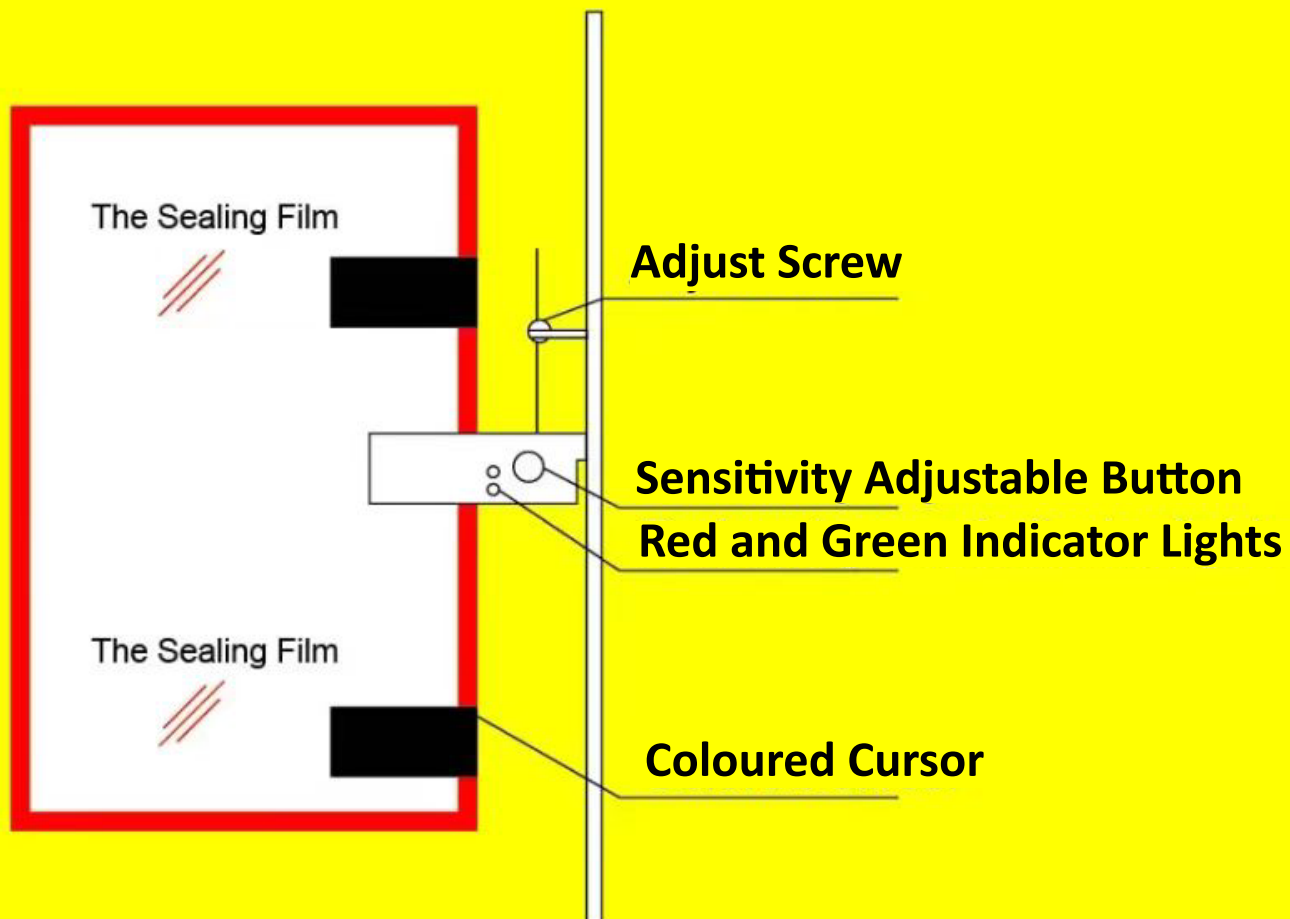

Please follow the instructions below for troubleshooting the electronic eye if the sealing film continues to rotate:

1. Ensure that the film passes through the notch of the electronic eye.
2. Utilize a "-11 screwdriver" to adjust the "sensitivity adjustable button" by turning it half a circle.
3. To verify normal functionality of the electronic eye:
 - The notch should align with the transparent film section.
 - The green light should be illuminated while the red light remains off.
 - When aligned with the colored cursor, both the red and green lights should be on simultaneously.

Don't forget to clean the electronic eye slot with a soft, damp cloth at least once a week as a reminder.

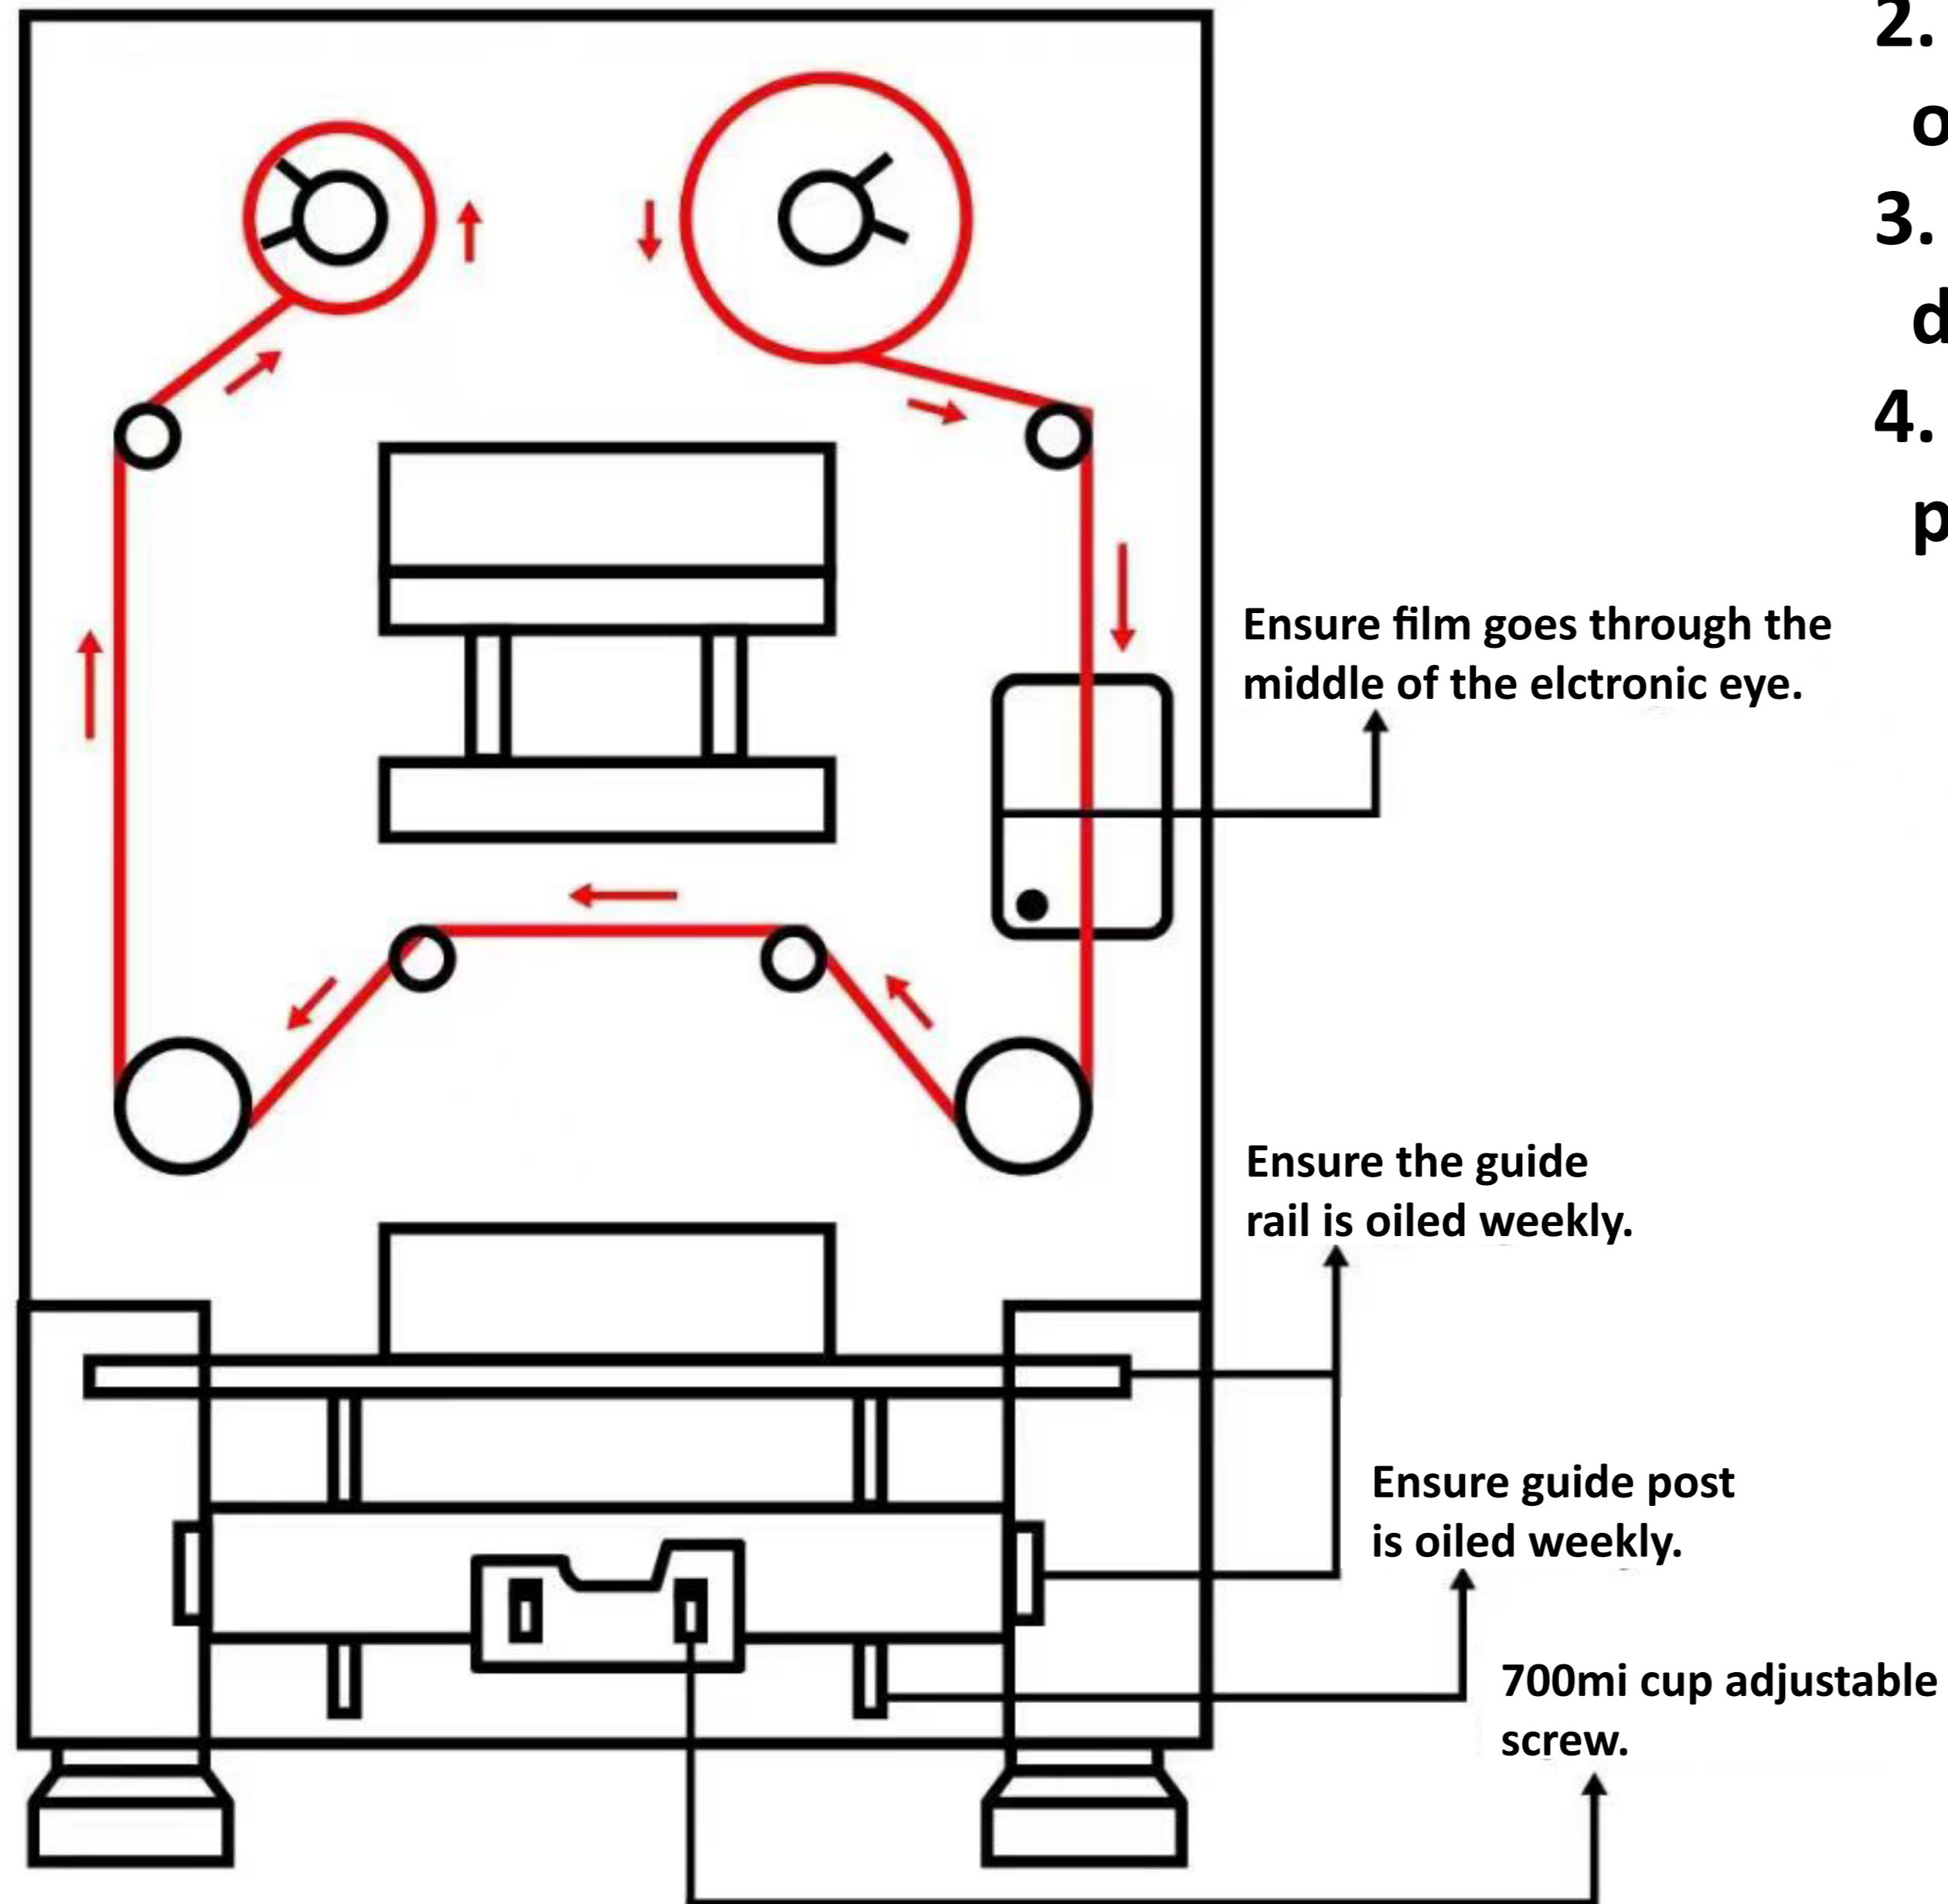

1. Ensure proper installation of the film.
2. Clean the machine with a damp cloth on a weekly basis.
3. Maintain cleanliness of the machine daily.
4. Use a soft cotton cloth to clean the photoelectric switch on a weekly basis.

Warning!

Please unplug the power when the machine is not in use.



To avoid the risk of injury from the blade, do not place your hand inside the machine unless the power is unplugged.

Kind Reminder of the Code

- **E1:** If the upper switch is faulty, please contact customer service for assistance.
- **E2:** If the lower switch is faulty, please reach out to customer service for support.
- **E3:** If the input switch is experiencing a fault, please contact customer service for resolution.
- **E51:** The fault of the output switch requires you to get in touch with customer service for assistance.

30

- **E52:** If the film is stuck in the electronic eye slot, or if the sensitivity of the electronic eye needs adjustment, turn it counterclockwise.



PLEASE DO NOT ADJUST THE RINGS!

