



# Special Reminder

If the sealing film continues to rotate while using the machine, please make the following adjustments to the electronic eye.

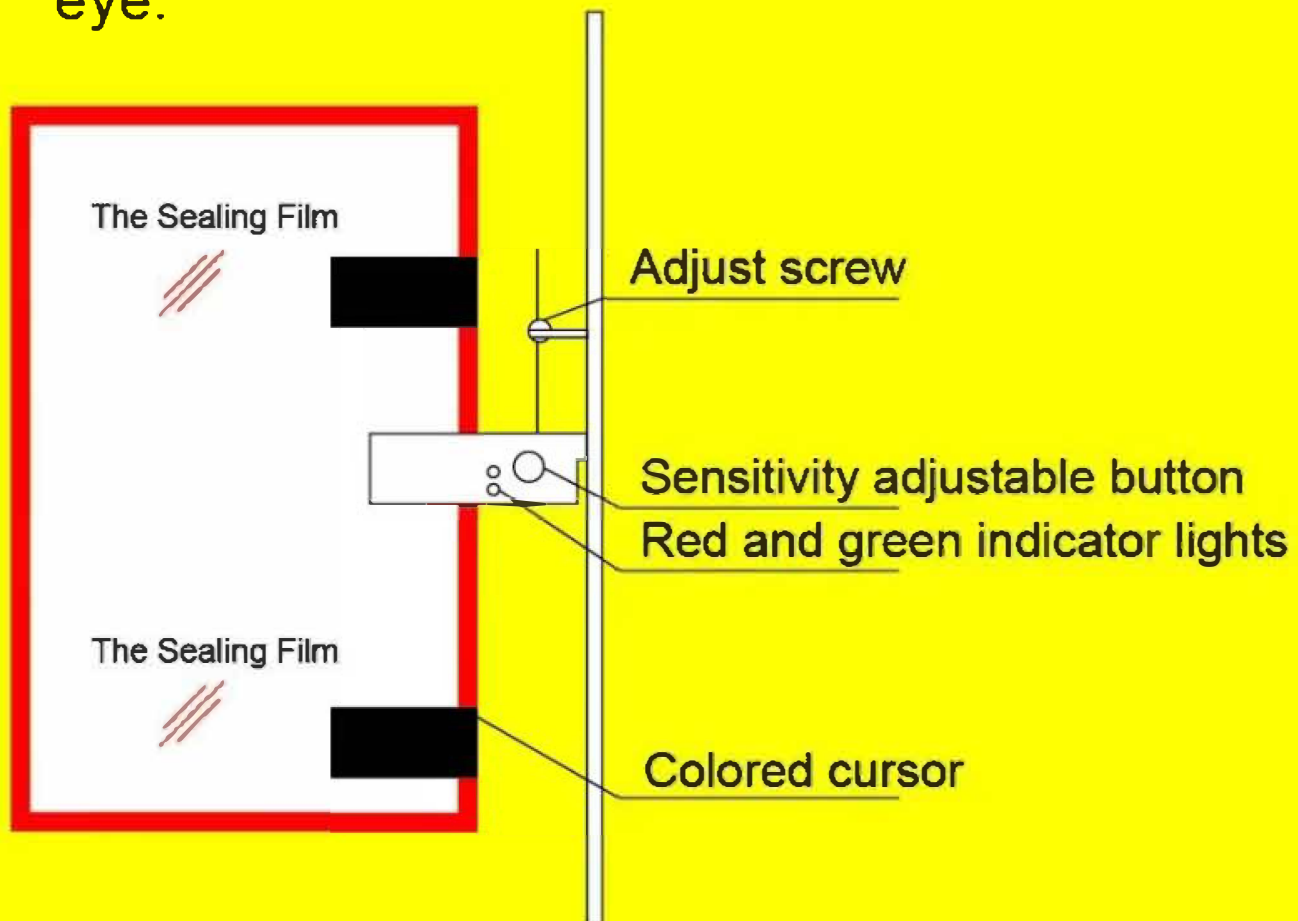

1. Confirm that the film passes through the notch of electronic eye
2. Use a "-" screwdriver to adjust the "sensitivity adjustable button" within half a circle.
3. The electronic eye works normally: the notch is aligned with the transparent film part, the green light is on, and the red light is off, when it is aligned with the colored cursor, the red and green lights are on at the same time.

Reminder: Please wipe the electronic eye slot with a soft damp cotton cloth once a week

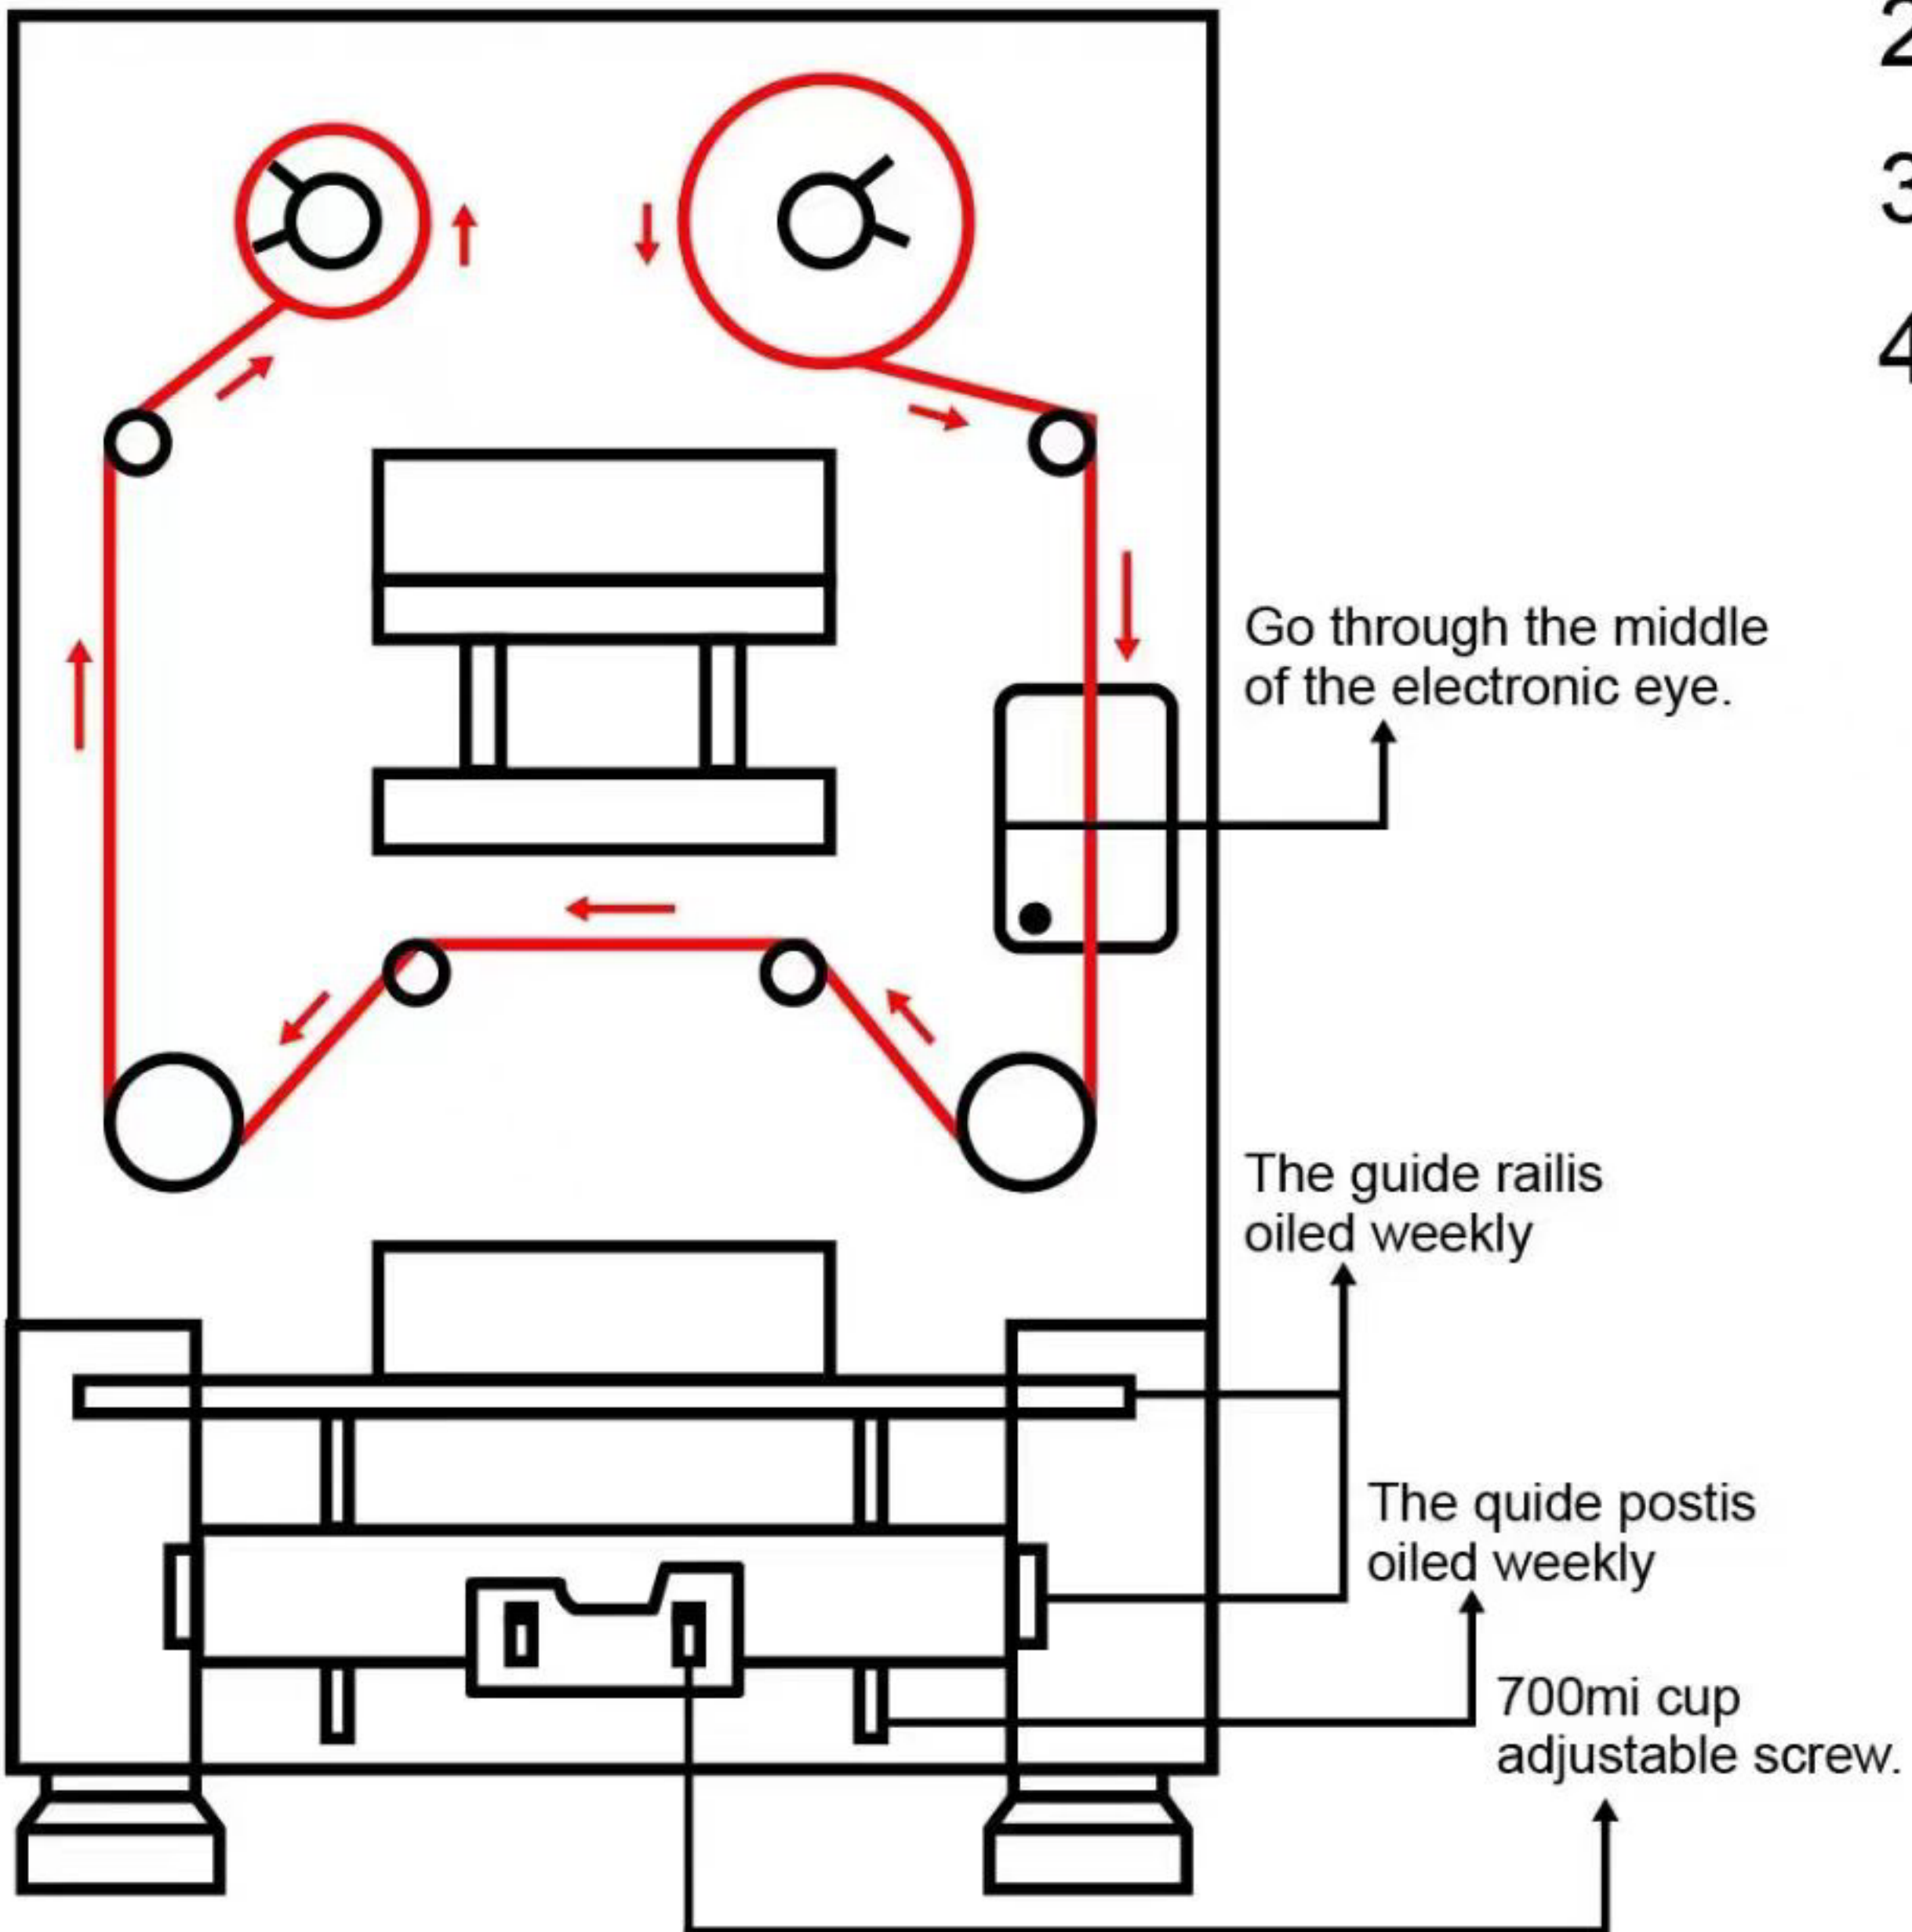

- 1 Film should install right.
- 2 Using wet cloth to clean the model weekly.
- 3 Keep the machine clean every day.
- 4 Using soft cotton cloth to clean the photoelectric switch weekly



## **Special attention:**

Please unplug the power when the machine is unattended.



Do not put your hand into the machine to prevent blade cutting unless the power is unplugged.

# Kind Reminder of the Code

- E1 The fault of upper switch, please contact customer service
- E2 The fault of lower switch, please contact customer service
- E3 The fault of input switch, please contact customer service
- E4 The fault of output switch, please contact customer service
- E51 Wipe the electronic eye, or adjust the sensitivity of the electronic eye clockwise.
- E52 The film isn't in the electronic eye slot, or adjust the sensitivity of the electronic eye counterclockwise.





**PLEASE DO NOT ADJUST THE RINGS!**

