



23942

MDF Camper Van Kitchen



MonsterShop

Try **Monster** - Buy **Monster** - Be **Monster**

Specification

Product Description

This unit is ideal for the self-build market, ready to be wrapped, covered, laminated or even sprayed. Included black trim and push button catches give your unit a professionally fitted look.

The kitchen will require scribing to the sides of the camper, ensuring a snug fit as camper sides can vary depending on the ply lining and carpet used.

It's recommended that you grab an extra pair of hands to help you when assembling the MDF Campervan Kitchen.

Item Contents

- 2 x Cupboard Doors
- 1 x Cupboard Side Panel
- 1 x Cupboard Middle Panel
- 1 x Cupboard/Wine Rack Front Panel
- 2 x Wine Rack Side Panel
- 4 x Wine Rack Middle Panels
- 1 x Wine Rack Back Panel
- 1 x Worktop
- 1 x Wardrobe/Cupboard Separating Panel
- 1 x Wardrobe Top Panel
- 1 x Wardrobe End Panel
- 1 x Wardrobe Front Panel
- 1 x Wardrobe Front Door
- 1 x Wardrobe Side Door
- 9 x Door Hinges
- 38 x Hinge Screws
- 4 x Door Handles, including 16 x Screws and Metal Fixing
- 4 x Wooden Door Stops
- 21 x Large Brass Screws
- 80 x Cam Bolts and Lock Screws

Specification

Product Specifics

MDF Camper Kitchen: 1980mm W

Cupboard Unit: 1145mm W x 680mm H x 435mm D

Wardrobe Unit: 835mm W x 1240mm H x 425mm D

MDF Thickness: 18mm

Total Weight: 64KG

Monster Guarantee


If you wish to return a product in perfect working order, we provide a 30 day returns policy as long as the item is unopened and in a resalable condition.

If for any reason a part is missing please get in touch with us within 7 days on receipt of your order. You can contact our friendly and helpful Customer Support Team via email or call. For full terms and conditions contact our Support Department via the details on the Contact Us page.

Specification

Product Features

- 1) Worktop doors
- 2) Worktop
- 3) Cupboard side/middle
- 4) Cupboard front panel
- 5) Wine rack back panel
- 6) Wine rack side panel
- 7) Wine rack middle panel
- 8) Wardrobe top panel
- 9) Wardrobe end panel
- 10) Wardrobe Front panel and door
- 11) Cam lock (Fixing A)
- 12) Cam bolt (Fixing B)

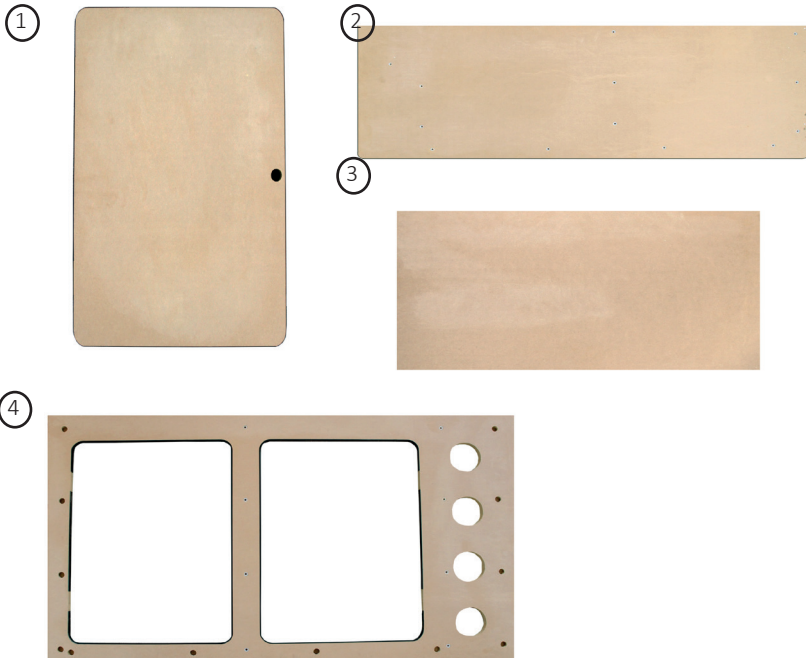


Specification

Product Features

5




6

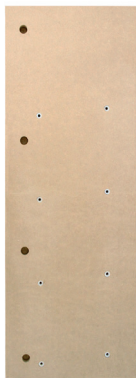


7




8

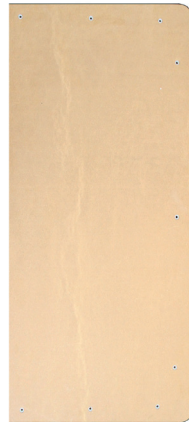

10

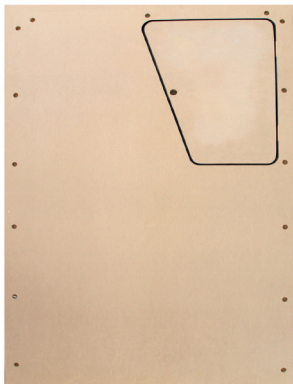

9

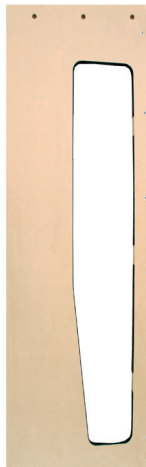

11



12



User Guide

Assembly Instructions

Step 1- Insert the fixings

Insert all fixings into the component.

The cam lock should be placed in the large round holes and the cam bolts should be screwed into the small plastic lined holes.

Ensure that the cam lock arrow is facing the direction of the oncoming cam bolt.


To lock the cam and bolt together, insert the bolt into the cam lock and turn the cam lock clockwise until it is locked tight.

User Guide

Assembly Instructions

Step 2- Assemble the wardrobe unit

- 1) Fit the side panels to the front panel and secure the cam locks. It may be easier to do this while the front panel is flat on the floor.

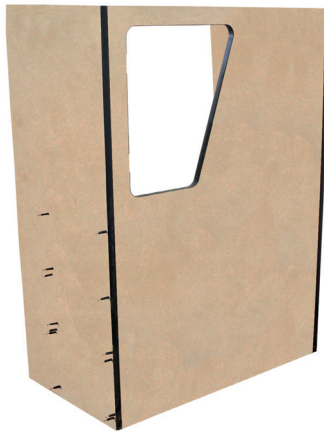

- 2) Place upright and attach the top panel. Secure the cam locks.




User Guide

Assembly Instructions

Step 3- Assemble the wine rack

- 1) Attach the four wine rack middle panels to one of the side panels and secure the cam locks.
- 2) Place the other side panel and secure the cam locks also.
- 3) Attach the back panel and secure cam locks again.

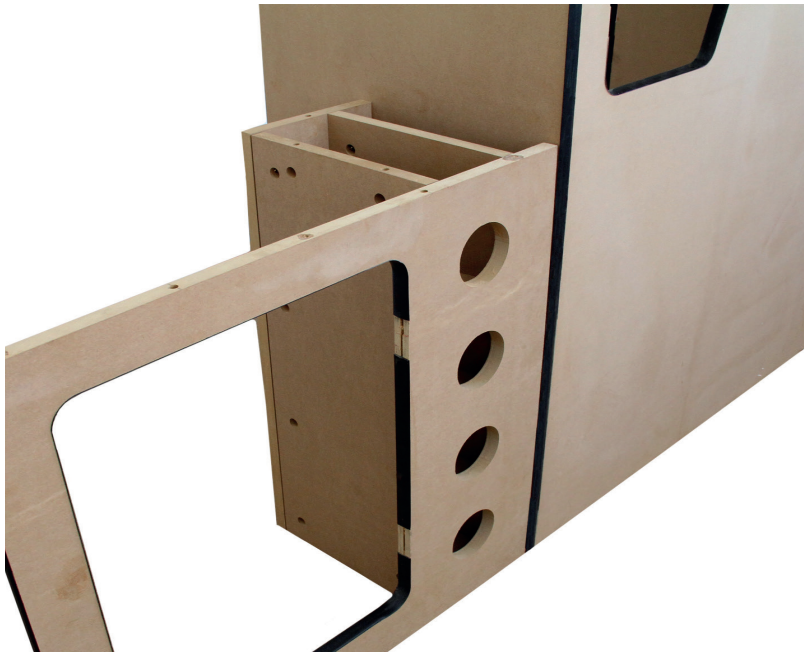

User Guide

Assembly Instructions

Step 4- Assemble the cupboards

- 1) Lay the cupboard front panel flat and attach the side and middle cupboard panels and wine rack. Secure cam locks.
- 2) Place upright and place worktop on top. Secure cam locks.



User Guide

Assembly Instructions

Step 5- Attach the doors

- 1) Attach the handles to the door first. Place the silver casing ring into the front of the door
- 3) Attach the handle by threading through the hole and secure using the screws.
- 4) Attach the hinges where there is no beading on each door using the smaller brass screws. The cupboard and front wardrobe door requires 2 hinges and the wardrobe side door requires 3 hinges.
- 5) Secure to the unit using the brass screws again.




User Guide

Assembly Instructions

Step 6- Join all pieces

- 1) Place all pieces upright in order. Your wardrobe unit should be next to your wine rack.
- 2) Fit the wardrobe unit to the wine rack using the cam and bolts and secure cam locks.
- 3) Check everything is secure and you're ready to fit your unit to your Camper Van.

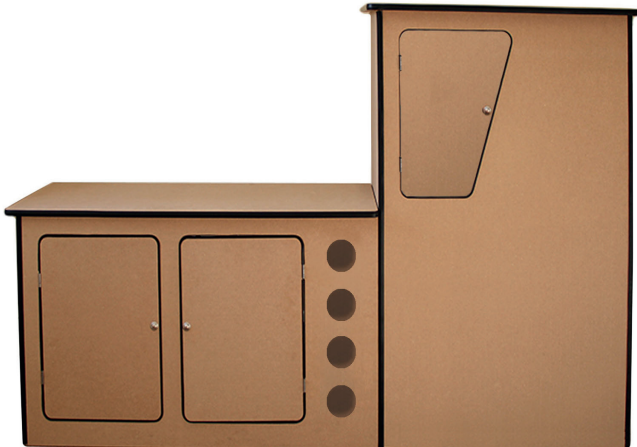

Troubleshooting

Resolution Guide

Please read through the guide below if you have any issues or faults with your device. The information covers and resolves the majority of frequently asked questions.

Q: There are parts missing from my order.

A: If there appears to be any part missing from your package contact our Customer Support team via the details on the Contact Us page within 7 days of receipt.

Q: The cam locks and bolts will not fit into the holes correctly.

A: There may be some sawdust/debris in the holes. This will need to be removed before building recommences. Use gloves to remove any debris, just in case wood splinters are present.

Q: Can I paint my MDF Camper Van Kitchen?

A: Yes, you can. However, this MDF isn't pre-primed. Make sure you apply a primer before you begin painting. The primer will prevent the paint from being affected by the colour of the MDF boards, and it will give it a nice finish. It can also be wrapped, covered, laminated or sprayed.

Q: What sort of tools do I need to assemble the MDF Candy Cart?

A: The only tool required to assemble the MDF Candy Cart is a screwdriver. All components are pre-drilled, and fixings are provided.

For all other issues please contact our Customer Support department via the details on the Contact page.

Safety Advice

Safe Working Practice

Please read through the safe working practice to ensure prevention of injury or damage to the device.

Ensure the MDF Camper Van Kitchen is only used indoors.

Be careful when lifting and assembling the components as they are quite fragile and heavy.

There may be debris and/or sawdust in the pre-drilled holes. Remove this before commencing with assembly. Use gloves to remove it.

Make sure each component is properly and securely locked before continuing with the assembly process.

Make sure the worktop is correctly assembled before you begin storing items on top of the Camper Van Kitchen.

Use appropriate cleaning products to clean the MDF Camper Van Kitchen.

You need 2 people when assembling/dismantling and moving the Camper Van Kitchen.

Make sure you apply a primer before painting the MDF Camper Van Kitchen.

We strongly recommend the use of respiratory PPE (rated P2 as a minimum) when cutting, sanding or drilling this product to prevent inhalation of harmful dust.

Ensure any modifications are made in open air, a safe distance away from others.



Contact Us

Sales Department

For information regarding this device or other products from our Monster divisions please use the following details below.

Tel: 01347 878888

Email: hello@monstershop.co.uk

Support Department

For queries about this device, warranty, returns or reporting faults please use the following details below.

Tel: 01347 878887

Email: help@monstershop.co.uk

Website

To view our product range and fantastic offers in the Monster Chef division please visit our website

www.monstershop.co.uk

Address

To visit our office Monster House and view our products, send postal correspondence or return items our address is provided below.

Monster House, Alan Farnaby Way, Sheriff Hutton
Industrial Estate, Sheriff Hutton, York YO60 6PG



Monster Group (UK) is one of the UK's fastest growing online retailers. We supply a diverse range of products which offer exceptional value for money. We strive to provide the best possible customer experience with free UK delivery across all our products and a Monster Guarantee for 100% satisfaction.

Our dedicated customer service team will be more than happy to help with any questions you may have.

Home & Garden
Storage Shelving
Sign & Digital
Retail & Hospitality
Commercial Equipment

Check out all our Monster brands at www.monstershop.co.uk
