



BUILDING YOUR AQUARIUM FILTER

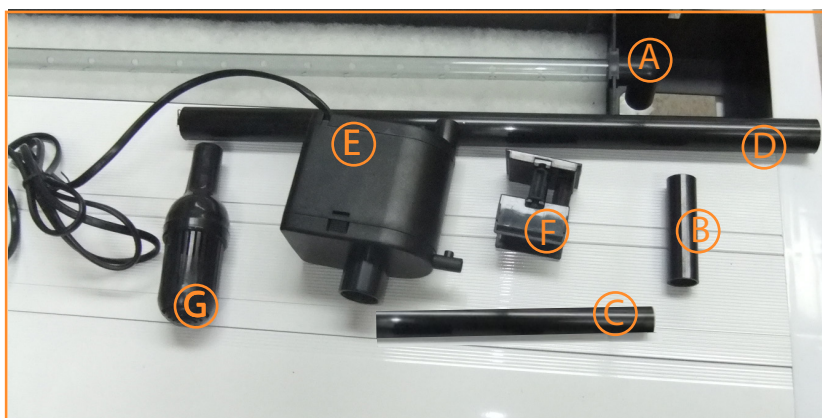

! WHAT YOU WILL NEED:

- (A) 1 x L-SHAPED PLASTIC JOINT (FOUND AT THE END OF THE SPRAY BAR)
- (B) 1 x SMALL BLACK TUBE
- (C) 1 x MEDIUM BLACK TUBE
- (D) 1 x LONG BLACK TUBE
- (E) 1 x AQUARIUM PUMP
- (F) 1 x PUMP ATTACHMENT CLIP
- (G) 1 x WATER INTAKE ATTACHMENT
- (H) 1 x CLEAR AIR TUBING

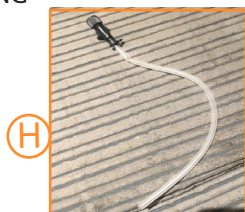

STEP 1:

- ATTACH THE SMALL BLACK TUBE (B) TO THE END OF THE L-SHAPED PLASTIC JOINT AT THE END OF THE SPRAY BAR (A)

STEP 2:

- ATTACH THE PUMP (E) TO THE PUMP ATTACHMENT CLIP (F).
- SLOT THE PUMP ATTACHMENT CLIP (F) UP INTO THE GAP (PICTURE 1)
- INSERT THE SMALL BLACK TUBE (B) INTO THE TOP OF THE PUMP AS IT CLIPS INTO PLACE.



(PICTURE 1)

STEP 3:

- SLOT THE MEDIUM BLACK TUBE (C) INTO THE BOTTOM OF THE WATER PUMP.

STEP 4:

- INSERT THE WATER INTAKE ATTACHMENT INTO ONE END OF THE LONG BLACK TUBE (D).
- THEN INSERT THE LONG BLACK TUBE (D) INTO THE END OF THE MEDIUM BLACK TUBE (C).

STEP 5:

- ATTACH THE CLEAR AIR TUBING (H) ONTO THE SMALL TUBE THAT CAN BE FOUND ON THE SIDE OF THE PUMP (PICTURE 2).
- GUIDE THE CLEAR AIR TUBING UP PAST THE PUMP ATTACHMENT CLIP SO IT IS OUT OF THE WATER.



(PICTURE 2)

IF YOU NEED SOME EXTRA ADVICE, PLEASE FEEL FREE TO CONTACT OUR FRIENDLY CUSTOMER SERVICE TEAM:

01347878887 support@monstergroupuk.co.uk