



3-Way Absorption Fridge 43L

210731

INSTRUCTION MANUAL

www.monstershop.co.uk



SPECIFICATION

PRODUCT DESCRIPTION

The 3-Way Absorption Fridge offers 43L of cool storage space and has been specially designed for caravans, campers and trailers. The key benefit of this KuKoo compact 3-way absorption fridge is that it can run very efficiently on gas. Go off grid with everything you need for the perfect camping trip.

PRODUCT SPECIFICS

AC SUPPLY:	230V/50Hz,80W, 0.4A
DC SUPPLY:	12V, 85W, 7.5A
VOLTAGE:	220V/110V/12V/Gas: 15g/hr
POWER CONSUMPTION:	0.7 kw.h/24h
GAS TYPE:	G30(Butane) G31(Propane)
GAS CONSUMPTION:	12g/h
FRIDGE VOLUME:	43 Litre
FRIDGE TEMPERATURE:	7~14 °C
PRODUCT DIMENSIONS:	435mm x 463mm x 597mm

ITEM CONTENTS

- 1 x 3-Way Absorption Fridge
- 2 x Plastic Door Shelf
- 2 x Steel Wire Shelf
- 1 x AC Power Cable
- 1 x DC Power Cable

SPECIFICATION

PRODUCT FEATURES

- A. Power Selector
- B. Thermostat for AC operation
- C. Gas Ignition
- D. Gas Indicator
- E. Removable Divider x 2
- F. Door Tray x 2
- G. Evaporator Cooling Element



Monster Group UK Limited's liability will be limited to the commercial value of the product only.

SAFETY ADVICE

SAFE WORKING PRACTICE

GENERAL SAFETY



WARNING!

- Do not operate the device if it is visibly damaged.
- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Do not store or use gasoline or other flammable vapors and liquid in the vicinity of this or any other appliance.
- If you smell gas: Open windows. Don't touch electrical switches. Extinguish any open flame. Immediately call your gas supplier.

SAFETY INSTRUCTIONS

- Disconnect both the AC and DC power sources before doing any maintenance work on the refrigerator. service work on this refrigerator must be done by a qualified service technician.
- The storage of flammable materials behind or around the refrigerator creates a fire hazard. Do not use the area behind the refrigerator to store flammable materials (gasoline, cleaning supplies, etc.)
- Do not spray liquids near electrical outlets, connections, or the refrigerator components. Many liquids are electrically conductive and can cause a shock hazard, electrical shorts, and in some cases fire.
- Do not bypass or change the refrigerator's electrical components or features.
- The refrigerator cooling system is under pressure. Do not try to repair or to recharge a defective cooling system. The cooling system contents can cause severe skin and eye burns, and can ignite and burn with an intense flame. Do not bend, drop, weld, move, drill, puncture, or hit the cooling system
- Do not use electrical appliances inside the food storage compartments of the device, unless those of the type recommended by the manufacturer.
- Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.

SAFETY ADVICE

SAFE WORKING PRACTICE

SAFETY INSTRUCTIONS

- Never pull the plug out of a socket by the cable.
- Do not damage the refrigerant circuit.
- Disconnect the device and other power consuming devices from the battery before connecting a quick charging device.
- Never use an unshielded flame to check gas bearing parts and pipes for leakage! There is a danger of fire or explosion.
- This refrigerator is not intended for use by children or by infirm persons unless they have been sufficiently supervised by a responsible person to make sure that they can use the refrigerator safely.
- Young children should be supervised to make sure that they do not play with the refrigerator.
- Do not place the device near open flames or other heat sources (heaters, direct sunlight, gas ovens etc.).
- When you discard an appliance, remove all doors to prevent accidental entrapment and suffocation.
- At regular intervals, make sure that the refrigerator flue the burner, the vent areas, and the ventilation air pathway between the vents are completely free from any flammable material or blockage. After a period of storage, it is especially important to check these areas for any flammable material or blockage caused by animals.
- The rear of the refrigerator has sharp edges and corners. To prevent cuts or abrasions when working on the refrigerator, be careful and wear cut resistant gloves.

SAFETY ADVICE

SAFE WORKING PRACTICE

OPERATING THE DEVICE SAFELY

- Before starting the device, ensure that power supply line and plug are in dry condition.
- When positioning the device ensure the supply cord is not trapped or damaged.
- Ensure that the fridge is level when installed .
- Ensure at all times that there is sufficient ventilation so that heat that arises during operation does not build up.
- Make sure that the device is sufficiently far away from walls and other objects so that air can circulate.
- Ensure that ventilation openings are not covered.
- Do not fill the inner compartment with ice or fluid.
- Never immerse the device in water.
- Protect the device and cable against heat and moisture.
- Operating the appliance with gas is not permitted at petrol stations. Leave the equipment switched off.

BEFORE INITIAL USE

- Ensure at all times that there is sufficient ventilation so that heat that is generated during operation can dissipate. Ensure that ventilation slots are not covered. Make sure that device is sufficiently far away from walls and other objects so that air can circulate.
- Install the appliance on a firm horizontal and levelled surface.
- Make sure that ventilation slots are not covered and that heated air can dissipate.
- Do not cover the ventilation openings at the top and/or back.

USER GUIDE

OPERATING USING THE MAINS 230V/50HZ

- Never use another source of energy at the same time (battery or gas).
- Verify that the mains voltage corresponds to the operating voltage specified on the technical data label at the back of the appliance. If the electrical specifications are correct, plug the safety electrical connector into an earthed wall socket, which should be wired according to the ruling regulations.
- Turn the 230V thermostat knob clockwise to the position “max”. After about 2 hours, the effects of the cooling process become visible; frost on the inside evaporator.
- The thermostat enables the temperature of the fridge to be adjusted. After a cooling period of about 2 hours, the thermostat can be set on a desired position; this position is influenced by the surrounding temperature and the intensity of use. Select a suitable position for the thermostat knob but do not put at the minimum position as the cooling process will stop completely (i.e. no cooling). The appliance can be switched off by removing the plug from the wall socket.

USER GUIDE

OPERATING USING A BATTERY (12V)

- Never use another source of energy at the same time (mains or gas).
- Prior to use of any battery; verify the voltage of the battery with the voltage indicated on the technical data label at the back of the appliance.
- When the appliance is powered by a car battery, only switch the fridge on while the car is travelling. If the appliance remains switched on when the car's engine is not running, then the battery will be discharged and it may be impossible to restart the engine.
- When using a battery as a power source, there is no thermostatically temperature controller (i.e. you cannot increase or decrease the temperature inside the fridge).
- Pre-cool the fridge using the mains before starting a journey and try to put only pre-cooled products inside the fridge.
- To start up the unit, connect the supplied cable at the back in the 12v socket and put the corresponding side into the cigarette lighter socket of the vehicle. To disconnect, remove the connector from the cigarette lighter socket.

CONNECTING THE GAS SUPPLY

- Do not connect the other power source (AC, DC) as you are operating the gas.
- The appliance can be used with gas cylinder of weights between 4.5 to 15 kg butane and 3.9 to 13 kg propane
- Only use cylinders of propane or butane gas (not natural gas or city gas) with an approved pressure reduction valve and suitable head. Be sure the gas pressure to be correct on regulator.
- Only operate the fridge at the pressure shown on the type of plate.
- Always operate the fridge in Gas mode in a good ventilation or outdoor To avoid rain or water to spill Into the fridge as it is working by burner system on back side of fridge.
- Do not operate the gas connection in an underground or closed area. Do not operate the gas fridge directly under the sunshine.

USER GUIDE

OPERATING USING BOTTLE GAS

- Insert battery for the gas ignition (replacing battery).
- Place the battery AA type into the battery rack on the base of the control panel bar.
- Without the battery the gas ignition will not work.

To connect the fridge to the pressure regulator use an approved flexible gas hose.

- This must not be longer than 1 Meter and should have a flexible gas hose inside dimension of 8mm. The hose must not be twisted!
- Ensure that the hose not obstructed, kinked, or in contact with any part of the fridge other than at its connection.
- The pressure-regulator must be compatible for Butane (28mbar) or for Propane (37mbar). Use a suitable regulator certified to EN 16129: 2013.
- To connect the pressure regulator to the gas cylinder, the valve of Cylinder must be closed.
- Connect the pressure-regulator to the cylinder by screwing.

GAS CYLINDER → PRESSURE REGULATOR → FRIDGE


- Turn the power to gas position then press the Ignition
- If this is the first time using gas as a power source you need to press the Ignition for up to 30-40 seconds.
- For subsequent usage the Ignition start up time will be 7-8 seconds.

USER GUIDE

OPERATION INSTRUCTIONS

COMPLETELY SHUTTING DOWN GAS OPERATING

Switch to OFF o position (as below) then the gas supply will close down. Remember close gas cylinder or gas regulation supply must be completely disconnected.

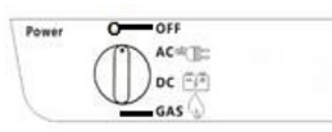

MAINTENANCE



WARNING

Always disconnect the device from the power supply before you clean and service it.

- The fridge must be defrosted regularly in order to ensure a correct operation.
- Do not use abrasive cleaning agents or hard objects during cleaning as these can damage the fridge.
- Regularly clean the device interior and exterior with a damp cloth.
- Never use a knife or other sharp tool to remove ice.
- Make sure that the air inlet and outlet vents on the device are free of any dust and dirt, so that heat can be released, and the device does not get damaged.
- If the appliance is to remain unused for a longer period, disconnect it, clean it and leave the door slightly opening during storage to prevent unpleasant odours.
- It is recommended that adequately cover the burner outlets to protect against insects nesting inside the burner.

TROUBLESHOOTING

RESOLUTION GUIDE

WHAT DO I DO IF THERE ARE MISSING PARTS FROM MY ORDER?

If there appears to be any part missing from your order, contact our friendly and helpful Customer Support Team within 7 days of receipt.

WHY IS MY FRIDGE NOT TURNING ON?

Try using another plug socket to power your fridge. Also check the fuses, and replace if necessary. If using the cigarette lighter in a vehicle to power on your fridge, check the ignition is turned on. If the problem still persists, get in touch with our friendly and helpful Customer Support Team.

WHY IS MY FRIDGE NOT GETTING COLD?

Check that it is getting power firstly. If it is still not cooling, contact our Customer Support Team for a repair.

**FOR ALL OTHER ISSUES, PLEASE CONTACT OUR
CUSTOMER SUPPORT TEAM.**



SPÉCIFICATIONS

DESCRIPTION DU PRODUIT

DÉTAILS DU PRODUIT

LISTE DES PIÈCES

SPÉCIFICATIONS

CARACTÉRISTIQUES DU PRODUIT

La responsabilité de Monster Group UK Limited sera limitée à la valeur commerciale du produit.

CONSEILS DE SÉCURITÉ

 PRATIQUE DE TRAVAIL SÉCURITAIRE

MODE D'EMPLOI

INSTRUCTIONS DE MONTAGE

MODE D'EMPLOI

ENTRETIEN

DÉPANNAGE

GUIDE DE RÉOLUTION

QUE FAIRE S'IL MANQUE DES PIÈCES À MA COMMANDE?

S'il semble manquer des pièces à votre commande, contactez notre équipe du service client dans les 7 jours suivant la réception.

**POUR TOUT AUTRE PROBLÈME, VEUILLEZ
CONTACTER NOTRE ÉQUIPE DU SERVICE CLIENT.**



SPEZIFIKATIONEN

PRODUKTBESCHREIBUNG

PRODUKTSPEZIFIKA

TEILELISTE

SPEZIFIKATION

PRODUKTMERKMALE

Die Haftung von Monster Group UK Limited ist auf den Handelswert des Produkts beschränkt.

SICHERHEITSHINWEIS

 SICHERES ARBEITEN

BENUTZERLEITFADEN

MONTAGEANLEITUNGEN

BENUTZERLEITFADEN

WARTUNG

FEHLERBEHEBUNG

LÖSUNGSGUIDE

WAS MACHE ICH, WENN BEI MEINER BESTELLUNG TEILE FEHLEN?

Falls bei Ihrer Bestellung ein Teil zu fehlen scheint, wenden Sie sich bitte innerhalb von 7 Tagen nach Erhalt der Ware an unser freundliches und hilfsbereites Kundenservice-Team.

**FÜR ALLE ANDEREN FRAGEN WENDEN SIE SICH BITTE AN
UNSER KUNDENSERVICE-TEAM.**



ESPECIFICACIONES

DESCRIPCIÓN DEL PRODUCTO

ESPECIFICACIONES DEL PRODUCTO

LISTA DE PIEZAS

ESPECIFICACIONES

CARACTERÍSTICAS DEL PRODUCTO

La responsabilidad de Monster Group UK Limited estará limitada únicamente al valor comercial del producto.

CONSEJOS DE SEGURIDAD

PRÁCTICAS DE TRABAJO SEGURAS

GUÍA DEL USUARIO

INSTRUCCIONES DE ENSAMBLAJE

GUÍA DEL USUARIO

MANTENIMIENTO

SOLUCIÓN DE PROBLEMAS

GUÍA DE RESOLUCIÓN

¿QUÉ PUEDO HACER SI LE FALTAN PIEZAS A MI PEDIDO?

Si parece faltar alguna pieza en su pedido, por favor, comuníquese con nuestro amable y servicial Equipo de Atención al Cliente en los 7 días posteriores a la recepción de su pedido.

**PARA CUALQUIER OTRO PROBLEMA, POR FAVOR CONTACTE
CON NUESTRO EQUIPO DE ATENCIÓN AL CLIENTE**



SPECIFICHE

DESCRIZIONE DEL PRODOTTO

SPECIFICHE DEL PRODOTTO

LISTA COMPONENTI

SPECIFICHE

CARATTERISTICHE DEL PRODOTTO

La responsabilità di Monster Group UK Limited sarà limitata al solo valore commerciale del prodotto.

CONSIGLI PER LA SICUREZZA

 PRATICHE DI LAVORO SICURO

GUIDA UTENTE

ISTRUZIONI PER IL MONTAGGIO

GUÍA DEL USUARIO

MANTENIMIENTO

RISOLUZIONE DEI PROBLEMI

GUIDA ALLA RISOLUZIONE DEI PROBLEMI

COSA DEVO FARE SE NEL MIO ORDINE CI SONO DELLE PARTI MANCANTI?

Se sembra che all'interno del tuo ordine manchino delle parti, contatta il nostro gentile e disponibile team di assistenza clienti entro 7 giorni dalla ricezione del tuo ordine.

**PER QUALUNQUE ALTRO PROBLEMA, CONTATTA IL NOSTRO
TEAM DI ASSISTENZA CLIENTI.**



OMSCHRIJVING

PRODUCT OMSCHRIJVING

PRODUCTSPECIFICATIES

ONDERDELENLIJST

SPECIFICATIE

PRODUCT SPECIFICATIE

De aansprakelijkheid van Monster Group UK Limited is beperkt tot de commerciële waarde van het product.

VEILIGHEIDSADVIIES

 VEILIG GEBRUIK

HANDLEIDING

MONTAGE-INSTRUCTIES

HANDLEIDING

ONDERHOUD

PROBLEEM OPLOSSEN

OPLOSSINGEN

WAT MOET IK DOEN ALS ER ONDERDELEN VAN MIJN BESTELLING ONTBREKEN?

Neem wanneer een onderdeel van je bestelling ontbreekt binnen 7 dagen na ontvangst contact op met onze vriendelijke en behulpzame klantenservice.

**NEEM VOOR ALLE ANDERE KWESTIES CONTACT
MET ONZE KLANTENSERVICE OP.**



SPECIFIKATION

PRODUKTBESKRIVNING

PRODUKTSPECIFIKATIONER

MEDFÖLJANDE DELAR

SPECIFIKATION

PRODUKTFUNKTIONER

SÄKERHETSÅD

 SÄKER ARBETSÖVNING

ANVÄNDARGUIDE

MONTERINGS INSTRUKTIONER

BRUKSANVISNING

SKÖTSEL

FELSÖKNING

LÖSNINGSGUIDE

VAD GÖR JAG OM DET SAKNAS DELAR FRÅN MIN BESTÄLLNING?

Om det verkar som om någon del saknas i din beställning, kontakta vårt vänliga och hjälpsamma kundsupportteam inom 7 dagar efter mottagandet.

**FÖR ALLA ANDRA FRÅGOR, VÄNLIGEN KONTAKTA VÅRT
KUNDSUPPORTTEAM.**

Monster Group (UK) is one of the UK's fastest growing online retailers. We supply a diverse range of products which offer exceptional value for money. We strive to provide the best possible customer experience with free UK delivery across all our products and a Monster Guarantee for 100% satisfaction.

For information regarding this device or other products from our Monster divisions please contact Sales.

SALES

TEL: 01347 878 888

EMAIL: hello@monstershop.co.uk

For queries about this device, warranty, returns or reporting faults please contact Support.

SUPPORT

TEL: 01347 878 887

EMAIL: help@monstershop.co.uk

Pour plus d'informations concernant cet appareil ou d'autres produits de nos divisions de Monster veuillez utiliser les détails suivants ci-dessous.

DÉPARTEMENT COMMERCIAL

TEL: 01347 878 888

EMAIL: bonjour@monstershop.eu

Pour les interrogations concernant cet appareil, la garantie, les retours ou les défauts de déclaration veuillez utiliser les détails suivants ci-dessous.

DÉPARTEMENT DE SOUTIEN

TEL: 01347 878 887

EMAIL: help@monstershop.co.uk

Para información sobre este dispositivo u otros productos de nuestras divisiones de Monster por favor use los siguientes detalles.

DEPARTAMENTO DE VENTAS

TEL: 01347 878 888

EMAIL: hola@monstershop.eu

Para consultas sobre este dispositivo, la garantía, devoluciones o denuncias de fallos por favor use los siguientes detalles.

DEPARTAMENTO DE SOPORTE

TEL: 01347 878 887

EMAIL: help@monstershop.co.uk

Für Informationen bezüglich dieses Geräts oder anderer Produkte aus unserer Monster-Abteilung, benutzen sie die folgenden unten aufgeführten Angaben.

VERKAUFABTEILUNG

TEL: 01347 878 888

EMAIL: hallo@monstershop.eu

Für Fragen über dieses Gerät, die Garantie, Rückgaben oder bei Störungen, benutzen sie die folgenden unten aufgeführten Angaben.

SUPPORT-ABTEILUNG

TEL: 01347 878 887

EMAIL: help@monstershop.co.uk

Per informazioni riguardanti questo dispositivo o altri prodotti dalle categorie Monster utilizzare i dettagli sotto riportati.

DIPARTIMENTO VENDITE

TEL: 01347 878 888

EMAIL: ciao@monstershop.eu

Per domande riguardo dispositivo, garanzia, reso o per riferire di guasti, utilizzare i dettagli sotto riportati.

DIPARTIMENTO SUPPORTO

TEL: 01347 878 887

EMAIL: help@monstershop.co.uk

Monster House, Alan Farnaby Way,
Sheriff Hutton Industrial Estate,
Sheriff Hutton, York, YO60 6PG
www.monstershop.co.uk



 Try **Monster**. Buy **Monster**. Be **Monster**. 